




PMGR Starter & Relay Wiring


9162, 19162, 9172, 19172, 9180, 19180,
 9182, 19182, 9183, 19183,
 9100, 19100, 9103, 19103, 9109, 19109, 9112, 19112

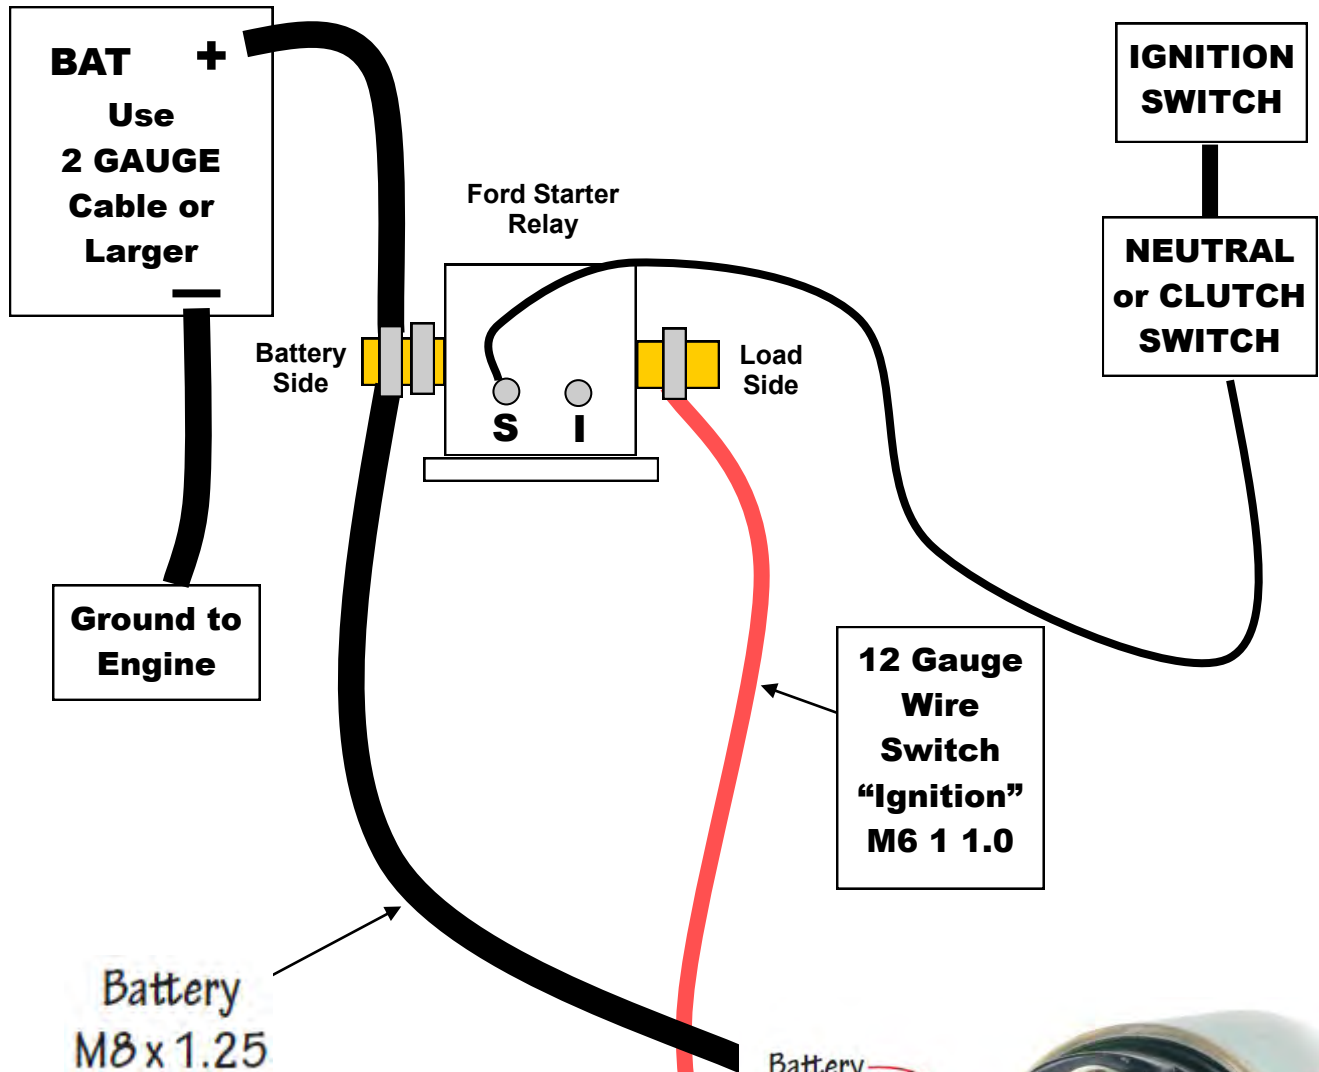

Battery
 M8 x 1.25

Do Not use a Jumper Wire on PMGR Starter Solenoid

Starter will not disengage properly w/ jumper wire

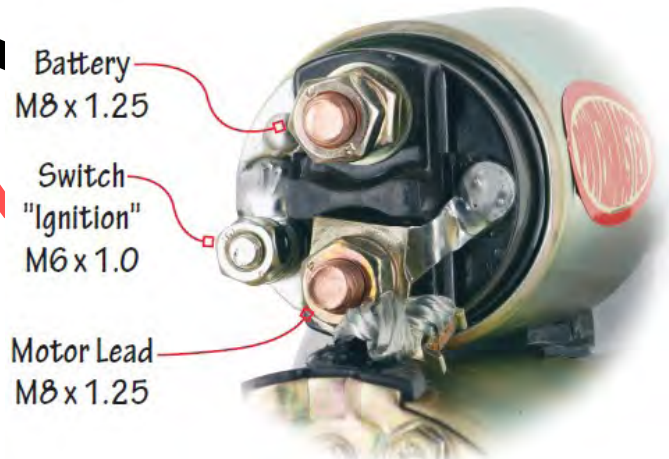

1833 Downs Drive, West Chicago, IL 60185
 Tech Dept Phone# (630) 957-4019 Email : tech@powermasterperformance.com