




1102 JK Hood bra Installation Instructions

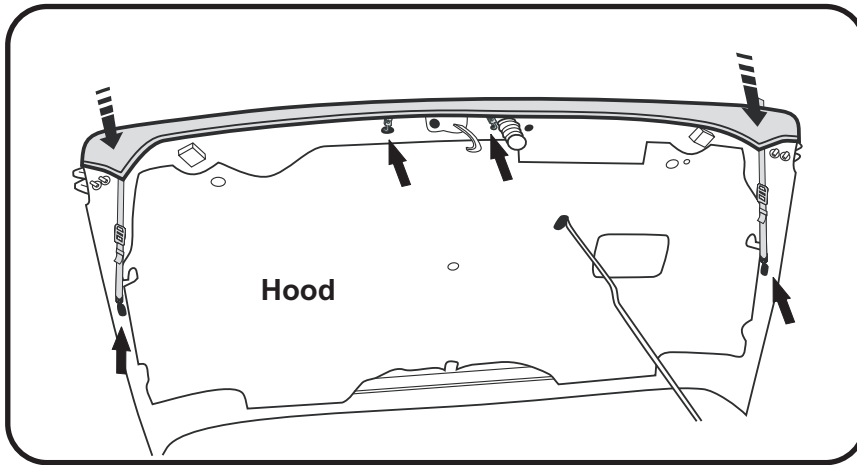


IMPORTANT.

This hood bra is designed to be very tight on the front of the vehicle. If it is not tight enough it will flap at higher speeds. **PLACE IN THE SUN AND ALLOW TO WARM UP BEFORE ATTEMPTING INSTALLATION.**


Installation:
Pull bra in place over hood and hook the straps as shown.

Loop the footman loop strap through as shown and tighten.

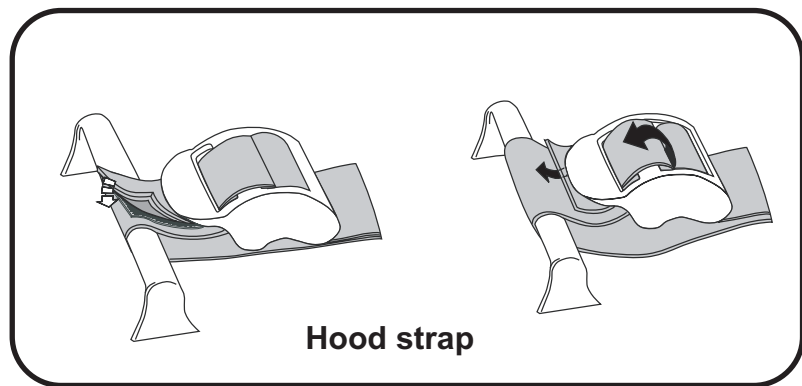

WARNING

IF THIS COVER BECOMES DAMP OR WET, IT MUST BE REMOVED AND ALLOWED TO DRY BEFORE REINSTALLATION. FAILING TO REMOVE A WET COVER AND ALLOWING IT TO DRY IN PLACE ON THE VEHICLE COULD RESULT IN PAINT DAMAGE.

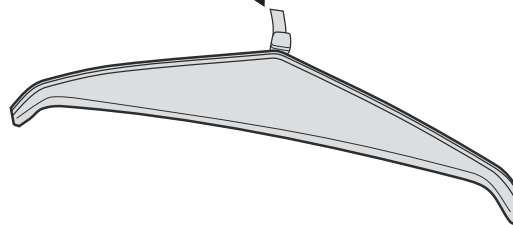

Warranty Information

Rampage products, Inc. warrants to the original purchaser of any top product it manufactures, that the product will be free of defects in material or workmanship for a period of 1 year from date of purchase. Such obligations under this warranty shall be limited to the repair or replacement, at Rampage products discretion, of any assembly or parts which, upon examination by Rampage products, Inc. proves to be defective. All defective items must be returned with proof of purchase to Rampage products, Inc., freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Rampage products obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and Rampage products, Inc. shall not be liable for any incidental or consequential damages arising from breach of this or any implied warranty.