



PART#: 546\5466 Installation Instructions

Rampage 05-10 Toyota Tacoma Ext Cab

PARTS LIST:

1	Driver/Left Sidebar	1	Passenger/Right Rear Mounting Bracket
1	Passenger/Right Sidebar	16	8-1.25mm x 30mm Hex Head Bolts
1	Driver/Left Front Mounting Bracket	16	8mm Lock Washers
1	Passenger/Right Front Mounting Bracket	16	8mm ID x 24mm OD x 2mm Flat Washers
1	Driver/Left Rear Mounting Bracket		



PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- Starting on the driver side front of the vehicle, use a flat screw driver to remove the plastic plugs. Partially attach drivers side front Mounting Bracket to vehicle using the included (2) 8mm x 30mm Hex Head Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers. Repeat this step for installing the rear driver's side Mounting Bracket.
- Align holes on the Side Bar with holes on the Mounting Brackets. Attach Sidebar to Mounting Brackets with the included (6) 8-1.25mm x 30mm Hex Head Bolts, (6) 8mm Flat Washers and (6) 8mm Lock Washers. Do not tighten at this time.
- Level and adjust Sidebar properly and tighten all hardware.
- Repeat Steps 2-4 for installing passenger Sidebar.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

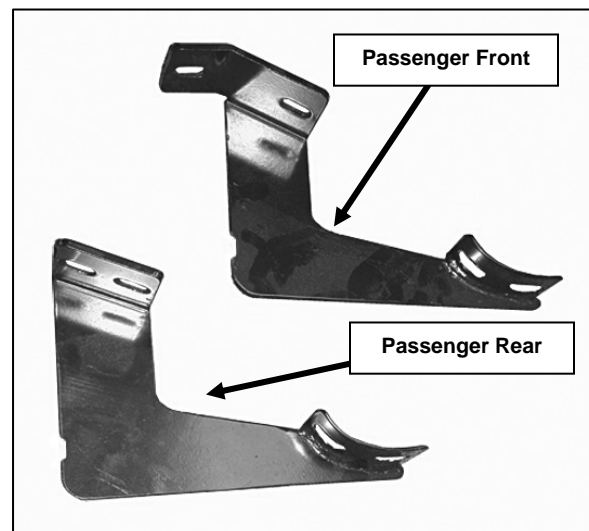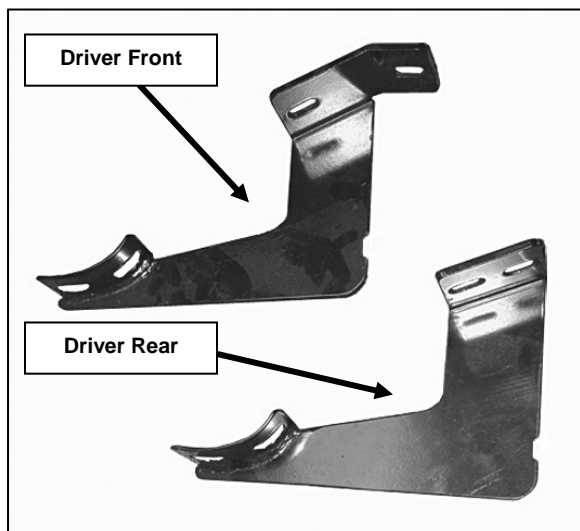


Driver Side Front Mounting Location

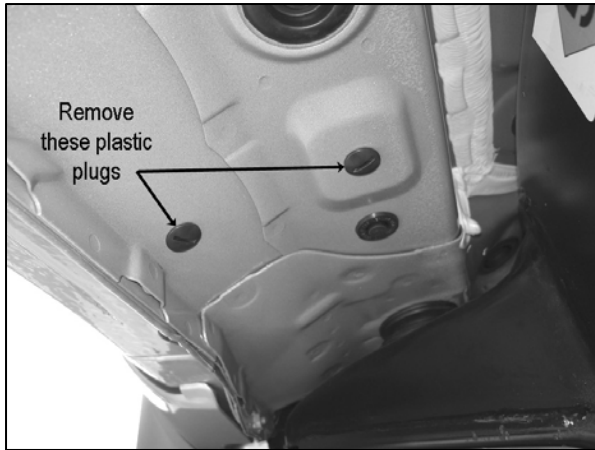

Driver Side Front Bracket Pictured

8mm x 30mm Hex Bolts
8mm Lock Washers
8mm Flat Washers

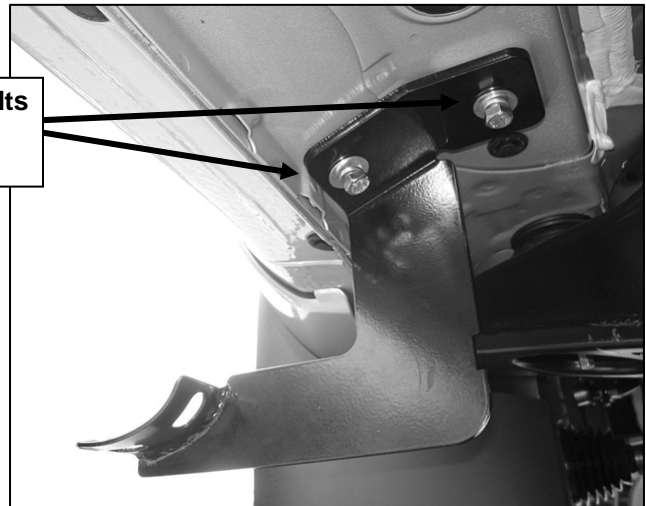

Driver Side Rear Bracket Pictured

8mm x 30mm Hex Bolts
8mm Lock Washers
8mm Flat Washers

