



## Installation Instructions


### California Brief M38A1&CJ5 Blk (#90501)

**NOTE: Carefully read instructions before attempting to install this part.**


Rampage Products is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product. **DRILLING REQUIRED**

**Step 1:** Open and unfold brief and lay on clean surface in direct sunlight for 30 minutes. For best results the temperature should be over 75 degrees. You can still install brief if without doing so, but you will need to tighten the top as it stretches out during use.

**Step 2:** Place the front of the brief over the windshield channel and fold the plastic strip under and insert the front edge of the brief into the windshield channel. Pull each end of the brief until it is even with the windshield channel. (Fig 1 )

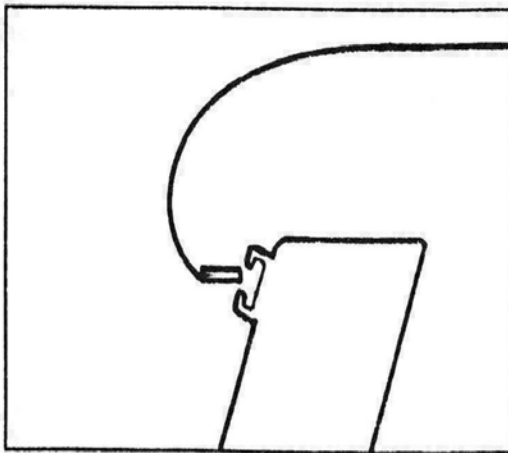

(Fig 1 )

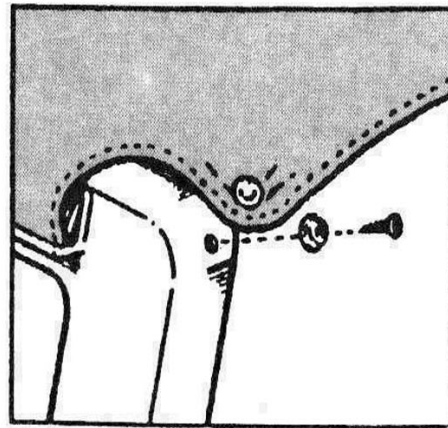

(Fig 2 )

**Step 3:** Pull the snap down on front corner of windshield frame and mark location. Drill a 1/8" hole and insert included snap with screw. (Fig 2 ) .You can skipped this step if your vehicle already have these.

**Step 4:** Lay the back of the brief over the main bar of the roll bar. Pull the rear corner straps down towards the back of the vehicle and slide through the footman loops and back up to the buckle and pull tight. (Fig 3 ) (footman loops are standard parts on Jeeps that were originally soft top models) .If your Jeep have footman loops ,then installation is now complete. Otherwise, please proceed to the other step.

**Step 5:** Find the best location for the footman loops. This may be on top of the rear corner of the body tub, or on the inside lip of the body tub, etc. When you have determined the best location, mark and drill the holes using a 1/8" drill bit. Fasten the footman loops using the supplied screws. (Fig 4 ) You may now secure the straps through the footman loops as explained in Step 4.



(Fig 3 )



(Fig 4 )

### **LIMITED WARRANTY**

This Rampage Products item is warranted to the original purchaser to be free of defects in material and workmanship for a period of 90 days from the date of purchase. Rampage Products will repair or replace products, proven to be defective under normal use and service, shipped prepaid or delivered to Rampage Products. Customer must pay the costs to remove and re-install said products. Proof of the date of purchase is required. This warranty does not apply to products that have been altered improperly installed, misused or neglected, or damaged by accident. This warranty excludes all incidental or consequential damages.

Rampage Products  
9225 Stellar Court Unit C, Corona, CA 92883-4919, U.S.A.  
Phone: (951) 277-4949 Fax: (951) 277-2295  
e-mail: [info@rampageproducts.net](mailto:info@rampageproducts.net)  
Web: [www.rampageproducts.net](http://www.rampageproducts.net)  
*Made in China*