



## Installation Instructions

### Acoustic Brief Header Mount/California Brief 97-06 Jeep Wrangler

Included Components:  
1-Brief

Installation requires an aftermarket Windshield Channel (Rampage Products Part # 901004)

#### **INSTALLATION INSTRUCTIONS:**

Before you begin, the temperature of the Brief should be above 70 degrees Fahrenheit. We suggest laying the Brief in the sunlight for 1 hour before installation.

1. Locate the rubber blade on front edge (Figure 1).

Figure 1



2. Place the Brief on top of Jeep. Insert rubber blade into Windshield Channel, working from one side of vehicle to the other (Figures 2 & 3).

Figure 2

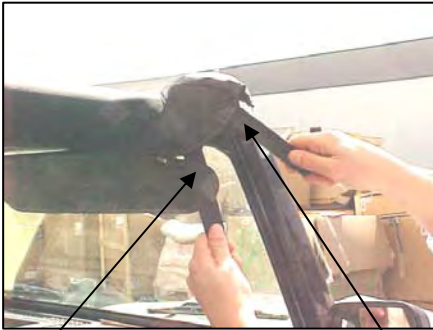


Figure 3



3. Locate 2 Velcro straps in each front corner of the Brief (Figure 4).
  - Wrap Strap A over the top of the bar towards the inside of the vehicle (Figure 5). The Velcro of Strap A should be facing outward from the roll bar.
  - Strap B wraps around the outside of the roll bar.
  - Attach Strap B to Strap A on the underside of the roll bar (Figure 6).
  - Do both driver and passenger sides of the vehicle.

Figure 4



Strap A


Strap B

Figure 5



Strap B

Figure 6

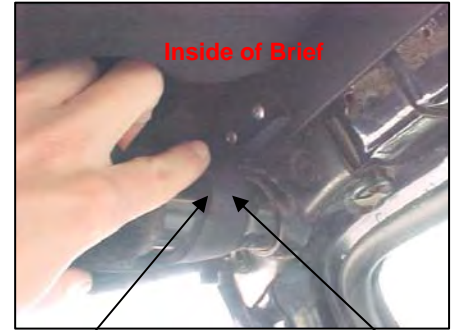

Strap A

Strap B

4. Locate the Velcro flaps on each side of the roll bar. Open and wrap flaps around roll bar, pull tight and press together to close (Figure 7). Do both driver and passenger sides of the vehicle.

Figure 7



5. Locate the center strap along the central roll bar. Run the center strap around the rear and under the central roll bar forward to the Footman Loop near the top center of the windshield. Run strap through Footman Loop and feed strap through its buckle securely (Figure 8).

Figure 8



6. Locate the corner rear strap and wrap around the roll bar and fasten into the buckle. Do both the driver and passenger sides (Figures 9 & 10).

Figure 9



Figure 10



7. Locate the two straps by the central roll bar and wrap around the bar. Insert the strap into the buckle and tighten. Do both the driver and passenger sides of the vehicle (Figure 11).

Figure 11



8. Re-adjust Velcro and tighten all straps to assure a wrinkle-free fit.

Rampage Products  
22420 Temescal Canyon Rd Unit C, Corona, CA 92883, U.S.A.  
Phone: (951) 277-4949 Fax: (951) 277-2295  
e-mail: [info@rampageproducts.net](mailto:info@rampageproducts.net)  
Web: [www.rampageproducts.com](http://www.rampageproducts.com)  
Made in China