



**09-11 Dodge 2500 & 3500
4WD Dual Steering Stabilizer
Part # 7239**

www.skyjacker.com

REQUIRED TOOL LIST:

- Safety Glasses
- Metric / Standard Wrenches & Sockets
- Drill & Assorted Drill Bits
- Torque Wrench

Before beginning the installation, thoroughly & completely read these instructions & the enclosed driver's WARNING NOTICE. Affix the WARNING decal in the passenger compartment in clear view of all occupants. Please refer to the Parts List to insure that all parts & hardware are received prior to the disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about the installation of this product, call SKYJACKER® Technical Assistance at 318-388-0816.

Kit Box Breakdown:

Part #: 7239

ITEM#	DESCRIPTION	QTY
7000WS	WHITE STEERING DAMPER	2
7213-MB	03DGE,MAIN STRG STAB BRACKET	1
7213-DB	03DGE,DRIVER STRG STAB BRKT	1
7213-PB	03DGE,PASS STRG STAB BRACKET	1
B10RS	RED BOOT	2
BTIE	RED BOOT TIE	2
HB-7239	HDWR BAG: 7239 DUAL STAB	1
HSS	HYDRO SHOCK DECAL	2
I-7239	INST SHEET: 7239 DUAL STAB	1

Hardware Bag Breakdown:

HB-7239 HARDWARE BAG

ITEM#	DESCRIPTION	QTY
12X112FTB	1/2 X 1 1/2 FINE THRD BOLT	1
12X3FTB	1/2 X 3 FINE THREAD BOLT	1
38X114FTB	3/8 X 1 1/4 FINE THD/GRD 8	4
38X1716X234U	3/8 X 1 7/16 X 2 3/4 U-BOLT	2
140629	EB6 STUD BAG - P932/140629	4
HOURGLASS 5/8	HOURGLASS 5/8 SHOCK BUSHING	4
12FTN	1/2-20 FINE N/I LOCK NUT	2
38CTN	3/8-16 COARSE N/I LOCK NUT	4
38FTN	3/8-24 FINE N/I LOCK NUT	4
12SAEW	1/2 SAE WASHER	4


Hardware Bag Breakdown: (Continued)

HB-7239 HARDWARE BAG

ITEM#	DESCRIPTION	QTY
38SAEW	3/8 SAE WASHER	12
142121	ES24 SLEEVE/402087 1.38"	1

Installation:

1. Park the vehicle on a level concrete or asphalt surface with the tires pointing straight forward.
2. Set the emergency brake & block the rear tires.
3. Remove the OEM steering stabilizer from the OEM mount on the axle & OEM drag link.
4. Install the new Skyjacker passenger side bracket to the OEM stabilizer mount on the axle using the 1/2" x 3" fine thread bolt, washers, & nut. **Note:** Be sure to install the 1.38" anti-crush sleeve (Part # 142121) inside the OEM mount. (See Arrow in Photo # 1)
5. Mark & drill the two lower mounting holes of the bracket to 3/8". Once drilled, install the 3/8" x 1 1/4" fine thread bolts, washers, & nuts. (See Arrow in Photo # 2)
6. Install the new Skyjacker driver side bracket to the mounting hole in the bottom of the OEM coil spring mount, using the 1/2" x 1 1/2" fine thread bolt, washers, & nut. (See Arrow in Photo # 3)
7. Mark & drill the two lower bracket holes the same as in Step # 5. Once drilled, install using the 3/8" x 1 1/4" fine thread bolts, washers, & nuts.
8. Remove the OEM stabilizer bracket from the OEM drag link & install the new Skyjacker main bracket, using the 3/8" x 1 7/16" x 2 3/4" U-bolts, washers, & nuts. (See Photo # 4) **Note:** Be sure to line the U-bolts up with the OEM notches on the OEM drag link.
9. Install the new Skyjacker double ended studs to each bracket. **Note:** The studs will mount to the top of the outer brackets & to the bottom of the main bracket.
10. Slide the new Skyjacker boots over the shafts of the new Skyjacker steering stabilizers & attach with the supplied boot tie.

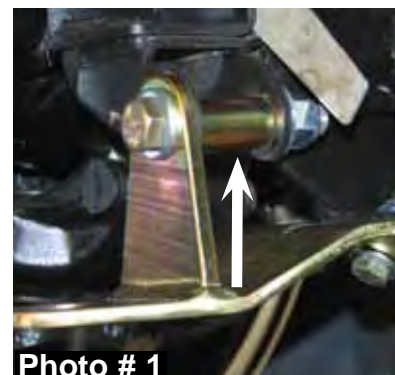

11. Install the new Skyjacker polyurethane bushings into each end of the new Skyjacker steering stabilizers. Attach the steering stabilizers onto the new studs & tighten. (See Photo # 5)

12. Once the steering stabilizers are installed, check all the brackets & bolts for proper installation. (See Photo # 6)



Photo # 5

Final Notes:

- Cycle the steering left to right & check all parts for adequate clearance.
- Retighten all hardware after the first 100 miles.



Photo # 6

TORQUE SPECIFICATIONS

<u>INCH SYSTEM</u>			<u>METRIC SYSTEM</u>		
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 8.8	Class 10.9
5/16	15 FT LB	20 FT LB	6MM	5 FT LB	9 FT LB
3/8	30 FT LB	35 FT LB	8MM	18 FT LB	23 FT LB
7/16	45 FT LB	60 FT LB	10MM	32 FT LB	45 FT LB
1/2	65 FT LB	90 FT LB	12MM	55 FT LB	75 FT LB
9/16	95 FT LB	130 FTLB	14MM	85 FT LB	120 FT LB
5/8	135 FT LB	175 FT LB	16MM	130 FT LB	165 FT LB
3/4	185 FT LB	280 FT LB	18MM	170 FT LB	240 FT LB

- The above specifications are not to be used when the bolt is being installed with a bushing.

Seat Belts Save Lives, Please Wear Your Seat Belt.



Jesus Christ Died For You.

John 3:16

For God so loved the world that He gave His only Son, so that everyone who believes in Him should not perish, but have everlasting life.
Romans 3:23

For all have sinned; all fall short of God's glorious standard.
Ephesians 2:8

God saved you by his special favor when you believed. And you can't take credit for this; it is a gift from God.
Psalms 18:2

The Lord is my Rock, my fortress, and my savior; my God is my Rock, in whom I find protection. He is my shield, the strength of my salvation, and my stronghold.
Romans 10:9-10

That if you shall confess with thy mouth the Lord Jesus, and shall believe in your heart that God hath raised him from the dead, you shall be saved. For with the heart man believeth unto righteousness; and with the mouth confession is made unto salvation.

Pray This Simple Prayer:

God, I come to You admitting I have sinned against You and I need you to take control of my life. The Bible says anyone who calls on the name of the Lord will be saved. I am calling on You, Jesus. I ask that You come live in my heart and be the Lord over my life today. I do believe You died on the cross for me and came back to life to give me life! Thank You, Lord Jesus for a new life in You!

Now, go and tell somebody about your new life in Jesus, get a Bible, begin to read it, and go to a Bible believing church.

If you would like someone to pray with you, call Kenneth Copeland Ministries anytime at 800-600-7395.

To listen to commercial free Christian radio on the web, go to www.887fm.org

Jesús murió por ti.

Juan 3:16

“Porque tanto amó Dios al mundo, que dio a su Hijo unigénito, para que todo el que cree en él no se pierda, sino que tenga vida eterna.”
Romanos 3:23

“Pues todos han pecado y están privados de la gloria de Dios.”
Efesios 2:8

“Porque por gracia ustedes han sido salvados mediante la fe; esto no procede de ustedes, sino que es el regalo de Dios.”
Salmos 18:2

“El Señor es mi roca, mi amparo, mi libertador; es mi Dios, el peñasco en que me refugio. Es mi escudo, el poder que me salva, ¡mi más alto escondite!”
Romanos 10:9-10

“9 Que si confi esas con tu boca que Jesús es el Señor, y crees en tu corazón que Dios lo levantó de entre los muertos, serás salvo. 10 Porque con el corazón se cree para ser justifi cado, pero con la boca se confi esa para ser salvo.”

Ahora dí esta simple oración:

Dios, vengo a Ti y admito que he pecado contra Ti, necesito que tomes el control de mi vida. La Biblia dice que todo aquel que invoca el nombre del Señor escapará con vida. En este momento yo clamo ante Ti, Jesús; te pido que vengas a vivir en mi corazón y que tomes el control de mi vida. ¡Yo creo que tu moriste en la cruz y resucitaste para darme vida! ¡Gracias Señor Jesús, por una nueva vida que tengo en Ti! Amen.

Ahora ve y dile a alguien sobre la nueva vida que tienes en Cristo. Compra una Biblia y empieza a leerla. Busca una Iglesia que cree en la Biblia y hazte parte de esa Iglesia.

Si te gustaría orar con alguien, puedes llamar a este número 800-600-7395

Puedes ir a este sitio de Internet para escuchar música Cristiana sin anuncios, www.887fm.org

Check out our favorite ministries at:

www.innministries.org

www.familychurch.org

www.kcm.org

