



**84-01 Cherokee XJ  
93-98 Grand Cherokee  
3" Value Flex Lifts  
Installation Instructions**

Before beginning the installation, read these instructions & the enclosed driver's WARNING NOTICE thoroughly & completely. Also affix the WARNING decal in the passenger compartment in clear view of all occupants. Please refer to the Parts List to insure that all parts & hardware are received prior to disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about installing this lift kit, contact SKYJACKER® Technical Assistance at 318-388-0816.

Make sure you park the vehicle on a level concrete or asphalt surface. Many times a vehicle is not level (side-to-side) from the factory, but usually not noticed until a lift kit has been installed which makes the difference more visible. Using a measuring tape, measure the front & rear (both sides) from the ground up to the center of the fender opening above the axle. Record this information below for future reference.

Driver Side Front: \_\_\_\_\_ Passenger Side Front: \_\_\_\_\_

Driver Side Rear: \_\_\_\_\_ Passenger Side Rear: \_\_\_\_\_

**IMPORTANT NOTES:**

- On models outfitted with extra bolt-on equipment & accessories, SKYJACKER® offers new coil spring isolator pads made from polyurethane to boost the front ride height 3/4" (order part # SIP275, pair). Also 1/2" rear spring plates are available (order part # SP1225, each).

**PRE-INSTALLATION NOTES:**

- A professional mechanic is recommended to perform the installation.
- Read the instructions *carefully* & *study* the photo illustrations before attempting the installation.
- Secure & properly block the vehicle on a level concrete or asphalt surface.
- Always wear safety glasses.

**ACCESSORIES:**

- 3/4" spring isolator pad spacers, pr #SIP275
- Transfer case lowering kit (with shifter linkage lowering bracket) #TCL30 or #TCL31
- Heavy duty OEM steering stabilizer #7009
- Front double disconnect extended sway bar links. #SBE320

## **Front Installation:**

1. Secure & properly block the rear tires / wheels of the vehicle on a level concrete or asphalt surface.
2. Raise the front of the vehicle & install jack stands under the frame behind the lower link rear brackets. Remove the front tires / wheels & front shocks. Remove the track bar bolt on the axle end only & lower the track bar. (It may be necessary to pry the track bar loose). (See Photo # 1)



**Photo # 1**



**Photo # 2**

3. Remove the drag link assembly from the pitman arm & lower it down. Remove the sway bar end links lower bolt at the axle on both sides. (See Photo # 2)



**Photo # 3**



**Photo # 4**

4. Lower the front axle down until the coil springs become loose. Remove the spring bolt & clip on the bottom of the left front coil. (See Photo # 3)



**Photo # 5**


5. Install the new Skyjacker coil springs. (See Photo # 4) Raise the jack so that enough load is applied to hold the coil springs in place. Reinstall the spring bolt & clip at the bottom of the left front coil. (See Photo # 5)



**Photo # 6**

6. Install the new Skyjacker front shocks (See Photo # 6) Reinstall the drag link to the pitman arm & tighten. (Be sure to reinstall the cotter pin). Install the front tires / wheels & lower the vehicle to the ground.

7. Locate the front track bar mount on the axle, insert the new Skyjacker bracket. (See Photo # 7) Insert the OEM bolt & keeper nut through the OEM hole. Drill a 3/8" hole & install the 3/8 x 1" bolt & nut. Attach the track bar using the supplied 7/16 x 2 1/2" bolt. (It may be necessary to rotate the steering wheel left or right to align the hole). Be sure all track bar bolts are tight.

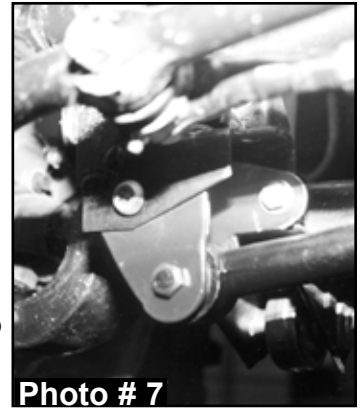

**Photo # 7**

8. Using the supplied 7/16" x 1 1/2" bolt place the new Skyjacker end link mounting bracket to the bottom of the sway bar with the bolt pointing up through the sway bar & the nut & 7/16 USS washer applied on top. Insert the metal sleeve (# 54314) into each sway bar end link eyelet.

The top 1/2" x 2 1/2" bolt connecting the bracket to the sway bar end link must be installed with the nut to the outside of the vehicle to provide adequate clearance to the frame. Install the new Skyjacker double disconnect end links on the inboard side of the axle bracket, being sure that the offset is turned inward. (See Photo # 8)



**Photo # 8**



**Photo # 9**


9. Set the length of the new Skyjacker Flex Series link assemblies.

A) It is very important to position the swivel ball socket so the bushings are exactly centered.

B) Measure the length of the link assembly between the center of each eye on each end. Rotate the rod end as needed, being sure to keep the ends square with each other until the link assembly measures:

Lower Front should be 16 1/16" long.

Lower Rear should be 16 7/8" long.

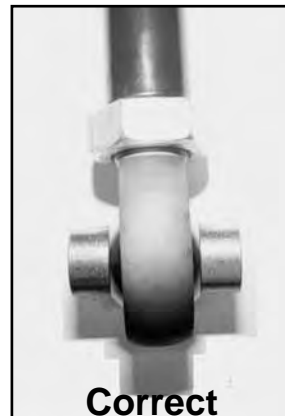

**Correct**



**Incorrect**

On each rod end, rotate the jam nut against the steel tubing. Hold the rod end in place with a crescent wrench & using a pipe or crescent wrench on the jam nut, completely tighten. Jam nuts must be tight against the steel tubing before installation.

10. Remove & replace the lower links with the new Skyjacker lower links (one side at a time). On Grand Cherokee models, mark the OEM position of the eccentric cams. (See Photo # 10) Do not tighten the bolts until both sides are installed. (See Photo # 11) On Grand Cherokee models, set the eccentric cams back in the OEM position.



**Photo # 10**

11. Install front tires wheels & lower the front of the vehicle to the ground.

### **CHEROKEE / COMANCHE - REAR:**

12. Place a floor jack under the rear axle & raise the vehicle. Place jack stands under the frame to support the vehicle & remove the rear tires / wheels & rear shock absorbers.

13. Remove the axle U-bolts & lower the axle a few inches. Care should be taken because when U-bolts are removed, the axle can move freely.

14. **ADD-A-LEAF INSTALLATION:** To perform the installation of add a leaf properly you must use two large C-clamps to contain the elastic potential energy in a leaf spring when the center tie bolt is removed. Attach & tighten a C-clamp on the leaf spring on both sides of the center tie bolt to hold the spring assembly securely together. Using vice grips to hold the head of the center bolt, loosen & remove. With care slowly loosen & remove the C-clamps & springs bottom overload leaf, if equipped.


15. Place the new Skyjacker add a leaf into the spring so the leaves remain progressive longest to shortest while matching the long end & short end of add a leaf to leaf spring. (The new add a leaf will install under the top main leaf.) Insert the new tie bolt through the OEM bottom overload leaf, if equipped, & then through the spring pack. Only finger tighten the tie bolt nut.

16. **DO NOT USE THE CENTER TIE BOLT TO DRAW THE SPRING LEAVES TOGETHER.** Failure of any component can cause an explosive disassembly & possible injury! Place one C-clamp on each side of the center tie bolt & tighten evenly. Once the C-clamp has drawn the leaves securely together, hold the center tie bolt head with vice-grips & tighten the nut. Remove the C-clamps.

17. Install the leaf spring on the vehicle & lower the rear axle down, aligning the spring pins into the axle housing. Install the OEM U-bolts & tighten evenly. Install the rear shock absorbers, rear tires / wheels, & lower the vehicle to the ground.

18. **NEW REAR SPRING INSTALLATION:** (Cherokee Only) Remove the spring eye bolts & remove the OEM springs from the vehicle. Install the new Skyjacker springs with the thick end of the bottom degree shims pointing toward the rear bumper. (Which is also the long end of the spring toward the rear bumper.) (See Photo # 12)

19. Raise the axle, aligning the spring pins into the axle housing. Install & tighten the new Skyjacker U-bolts evenly. Install the rear shock absorbers, rear tires / wheels, & lower the vehicle to the ground.

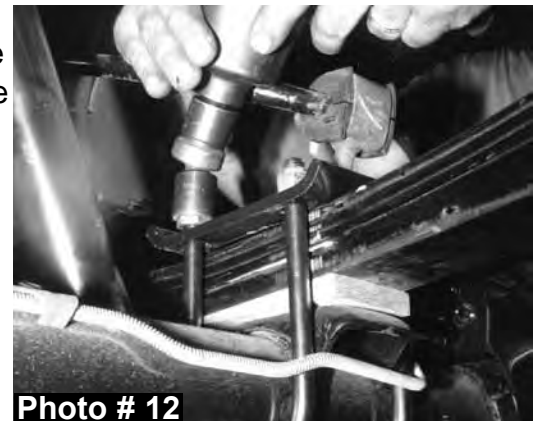

## **GRAND CHEROKEE - REAR:**

20. Raise the rear of the vehicle. Place jack stands under the frame ahead of lower link bracket to support the vehicle & remove the rear tires / wheels & rear shock absorbers. Remove the rear track bar & sway bar end link bolts at the axle. Lower the rear axle & remove the coil springs.
21. Install the new Skyjacker coil springs. Raise the jack up so enough load is applied to hold the coil springs in place.
22. Remove & replace the rear lower links with the new Skyjacker lower links (one side at a time). Only start these bolts & nuts, do not tighten at this time. **NOTE:** Install so the bushing is at the axle & the rod end at the frame.
23. Reattach the OEM track bar & sway bar end links into the OEM locations. (Do not tighten at this time.)
24. Install the new rear shocks, rear tires / wheels, & lower the vehicle to the ground. Tighten the rear track bar bolts on each end & the sway bar end links.

## **FINAL NOTES:**

- After the installation is complete, double check that all nuts & bolts are tight. (Do not retighten nuts & bolts where thread locking compound was used.) Check to ensure there is adequate clearance between All rotating, mobile, & fixed members.
- A transfer case lowering kit is available if a drive shaft vibration is present. Part Number TCL30 ('84-'93) or TCL31 ('94-'01). (Includes shifter linkage relocation bracket.)
- Rotate the driveshafts & check for interference at the differential yoke & cardan joint. If necessary, lightly dress the casting(s) & / or the U-joint tabs in order to eliminate binding.
- Check clearance between the inner side wall of tires & lower links. **It may be necessary to adjust the steering stops.**
- Ensure there is adequate clearance between the exhaust, brakelines, fuel lines, fuel tank, floor board, & wiring harnesses. Check the steering gear for interference & proper working order. Inspect the brakelines for damage & adequate clearance.
- With the vehicle on the ground, cycle the steering lock to lock & inspect the steering, suspension, driveline, & brakeline systems for proper operation, tightness, & adequate clearance.
- Have the headlights readjusted to the proper settings.
- Have a qualified alignment center check & realign to the factory specifications.

**SEAT BELTS SAVE LIVES. PLEASE WEAR YOUR SEAT BELT.**



Jesus Forgives,  
Rocks Don't

**Jesus Christ Died For You.**

John 3:16

For God so loved the world that He gave His only Son, so that everyone who believes in Him should not perish, but have everlasting life.  
Romans 3:23

For all have sinned; all fall short of God's glorious standard.  
Ephesians 2:8

God saved you by his special favor when you believed. And you can't take credit for this; it is a gift from God.  
Psalms 18:2

The Lord is my Rock, my fortress, and my savior; my God is my Rock, in whom I find protection. He is my shield, the strength of my salvation, and my stronghold.  
Romans 10:9-10

That if you shall confess with thy mouth the Lord Jesus, and shall believe in your heart that God hath raised him from the dead, you shall be saved. For with the heart man believeth unto righteousness; and with the mouth confession is made unto salvation.

Pray This Simple Prayer:  
God, I come to You admitting I have sinned against You and I need you to take control of my life. The Bible says anyone who calls on the name of the Lord will be saved. I am calling on You, Jesus. I ask that You come live in my heart and be the Lord over my life today. I do believe You died on the cross for me and came back to life to give me life! Thank You, Lord Jesus for a new life in You!

Now, go and tell somebody about your new life in Jesus, get a Bible, begin to read it, and go to a Bible believing church.

If you would like someone to pray with you, call Kenneth Copeland Ministries anytime at 800-600-7395.

To listen to commercial free Christian radio on the web, go to [www.887fm.org](http://www.887fm.org)

**Jesús murió por ti.**

Juan 3:16

"Porque tanto amó Dios al mundo, que dio a su Hijo unigénito, para que todo el que cree en él no se pierda, sino que tenga vida eterna."  
Romanos 3:23

"Pues todos han pecado y están privados de la gloria de Dios."  
Efesios 2:8

"Porque por gracia ustedes han sido salvados mediante la fe; esto no procede de ustedes, sino que es el regalo de Dios."  
Salmos 18:2

"El Señor es mi roca, mi amparo, mi libertador; es mi Dios, el peñasco en que me refugio. Es mi escudo, el poder que me salva, ¡mi más alto escondite!"  
Romanos 10:9-10

"9 Que si confi esas con tu boca que Jesús es el Señor, y crees en tu corazón que Dios lo levantó de entre los muertos, serás salvo. 10 Porque con el corazón se cree para ser justifi cado, pero con la boca se confi esa para ser salvo."

Ahora dí esta simple oración:  
Dios, vengo a Ti y admito que he pecado contra Ti, necesito que tomes el control de mi vida. La Biblia dice que todo aquel que invoca el nombre del Señor escapará con vida. En este momento yo clamo ante Ti, Jesús; te pido que vengas a vivir en mi corazón y que tomes el control de mi vida. ¡Yo creo que tu moriste en la cruz y resucitaste para darme vida! ¡Gracias Señor Jesús, por una nueva vida que tengo en Ti! Amen.

Ahora ve y dile a alguien sobre la nueva vida que tienes en Cristo. Compra una Biblia y empieza a leerla. Busca una Iglesia que cree en la Biblia y hazte parte de esa Iglesia.

Si te gustaría orar con alguien, puedes llamar a este número 800-600-7395

Puedes ir a este sitio de Internet para escuchar música Cristiana sin anuncios, [www.887fm.org](http://www.887fm.org)

**Check out our favorite ministries at:**

[www.innministries.org](http://www.innministries.org)

[www.familychurch.org](http://www.familychurch.org)

[www.kcm.org](http://www.kcm.org)

