



Jeep TJ Rear Shock Relocation Brackets

Part # TJRSB10

ITEM#	DESCRIPTION	QTY
JRSRB1-B	JEEP TJ REAR SHOCK BRACKET	2
12X3FTB	1/2 X 3 FINE THREAD BOLT	4
38X1FTB	3/8 X 1 FINE THREAD BOLT	2
12FTN	1/2-20 FINE N/I LOCK NUT	4
38FTN	3/8-24 FINE N/I LOCK NUT	2

ITEM#	DESCRIPTION	QTY
12SAEW	1/2 SAE WASHER	8
38SAEW	3/8 SAE WASHER	4
12XTFW	1/2"EXTRA THICK FLAT WASHER	4
142121	ES24 SLEEVE/402087 1.38"	2

1. Set the emergency brake and block the rear tires. If rear shocks are installed, remove at this time.
2. Attach the new relocation bracket over the factory bracket. Attach to rear of factory bracket using the supplied 3/8 x 1" fine thread bolt, washers, and nut. (See Arrow in Photo #1)
3. Next, attach the new bracket to the factory shock position on the factory bracket using the 1/2 x 3" fine thread bolt, washers, and nut. Be sure to use the supplied 1 3/8" anti crush sleeve (part# 142121) inside the factory bracket. (See Photo #2)
4. Attach the shock to the new bracket using the 1/2 x 3" fine thread bolt, washers, and nut. Be sure to use the 1/2" thick flat washers (part# 12XTFW) on each side of the bushing to prevent collapsing the bracket. (See Arrows in Photo #3). Be sure to retighten all bolts after the first 100 miles.



Photo #1

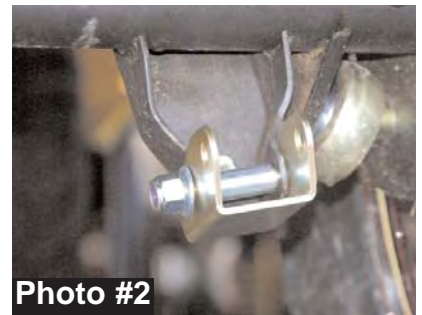


Photo #2

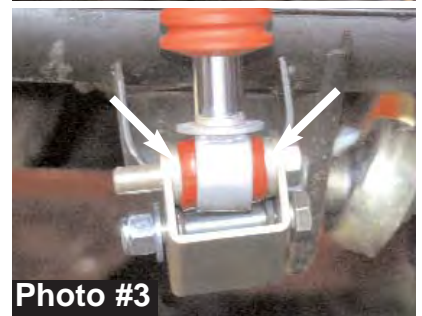


Photo #3

Seat Belts Save Lives, Please Wear Your Seat Belt.