

# **SPEED BY SPECTRE™**

## **Intake Installation Instructions P/N 99431**

**Year/Make/Model/Engine**  
**'97-'06 Jeep Wrangler TJ Utility Box**

### **Parts List**

- 1- Tool box
- 1- Lid seal
- 1- Spacer, 9mm length
- 1- Spacer, 74mm length
- 1- Bracket, long
- 1- Bracket, short
- 1- Liner
- 4- M8-1.25x12mm
- 1- M6-1.0x30mm
- 1- M6-1.0x90mm
- 4- M6 washer
- 2- Lock nut, M6-1.0
- 4- Lock nut, M8-1.0
- 4- M8 Washer

### **Tools Required:**

- Ratchet
- 13mm Socket
- 10mm Socket
- 10mm wrench



**NOTE: In order to install this kit Spectre P/N 9943 must be installed**


**Step 1**  
**Safety first!** Before you begin the installation, make sure that the vehicle is in park with the parking brake set. Disconnect the negative battery terminal and verify all components listed are present.



**Step 2**  
 Remove the two bolts that hold the core support bar to fire wall, and remove the factory core support bar. This hardware will be reused in a later step.




**Step 3**  
 Assemble the box with the two support brackets on the ends of the box. Leave the hardware loose for adjustment.

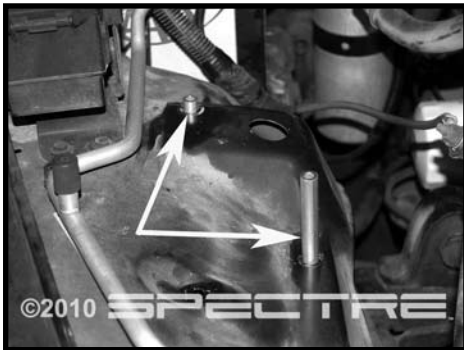

**Step 4**  
 Set the two spacers on the inner fender. See picture for locations.



**Step 5**  
 Install the box and install the factory bolts for the core support and firewall. These two bolts will be threaded on just enough leaving enough play allowing yourself to line up the holes in box with the free standing spacers.

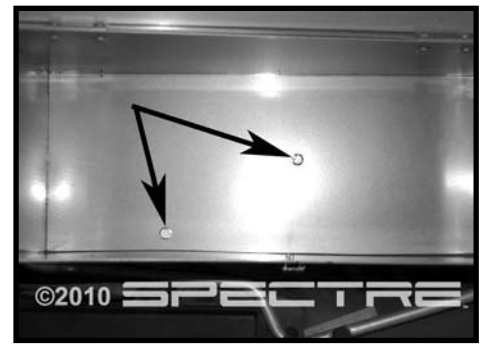

**Step 6**  
 Install the supplied hardware the bolts facing downward. Once set in location, install the washer and nut on the underside of the fender and securely fasten in place.



**Step 7**  
 With the box secured in place, go through and securely fasten all other hardware that was left loose for adjustments.



**Step 8**  
 Install foam rubber inside box.



**Step 9**  
 Making sure nothing is rubbing or hitting, reconnect the negative battery terminal. Start the vehicle, shut off and inspect the installation once more for any loose hardware. Test drive & enjoy!

If you have any difficulties or questions regarding the installation of this tool box, contact the Spectre Performance Technical Department by email - [Tech@spectreperformance.com](mailto:Tech@spectreperformance.com) or by phone 1-800-821-4868 Monday thru Thursday 6:00am to 4:30pm PST.

Product Info:  
 Performance Air Induction  
 System P/N 99431

**SPEED BY SPECTRE™**

(909) 673-9800

[www.spectreperformance.com](http://www.spectreperformance.com)

© 2010 SPECTRE PERFORMANCE Made in China (P) REV. 12/10