


- 1 RAISE THE HOOD ON THE VEHICLE AND REMOVE DIRT OR DEBRIS.
- 2 LINE UP HOOD THE PROTECTOR WITHE THE FACTORY HOLES ON THE UNDERSIDE OF THE HOOD. SLIDE A SCREW THROUGH EACH OF THE MOUNTING HOLES IN THE HOOD PROTECTOR INTO EACH OF THE HOLES IN THE HOOD. TIGHTEN JUST ENOUGH TO HOLD HOOD PROTECTOR IN PLACE.
- 3 CENTER THE HOOD PROTECTOR ON THE HOOD FROM END TO END AND TIGHTEN THE SCREWS WITH A SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN THIS MAY DAMAGE THE HOOD PROTECTOR.**
- 4 CLOSE THE HOOD CAREFULLY TO CHECK FIT, IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND RE-ADJUST UNTIL CENTERED. RE-TIGHTEN WITH SCREW DRIVER.

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

KIT CONTAINS:
HOOD PROTECTOR
6 MOUNTING SCREWS
TOOLS NEEDED:
PHILLIPS SCREWDRIVER

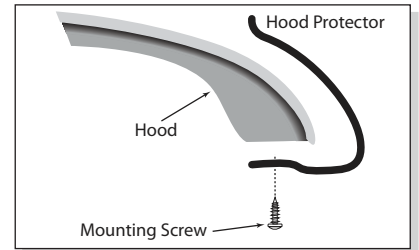


Stampede Products, Inc. • 1924 S. Washington, Blvd. • Camanche, IA. 52730 • Ph 563-259-9189 Fax 563-259-9288 • www.stampedeproducts.com

- 1 RAISE THE HOOD ON THE VEHICLE AND REMOVE DIRT OR DEBRIS.
- 2 LINE UP HOOD THE PROTECTOR WITHE THE FACTORY HOLES ON THE UNDERSIDE OF THE HOOD. SLIDE A SCREW THROUGH EACH OF THE MOUNTING HOLES IN THE HOOD PROTECTOR INTO EACH OF THE HOLES IN THE HOOD. TIGHTEN JUST ENOUGH TO HOLD HOOD PROTECTOR IN PLACE.
- 3 CENTER THE HOOD PROTECTOR ON THE HOOD FROM END TO END AND TIGHTEN THE SCREWS WITH A SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN THIS MAY DAMAGE THE HOOD PROTECTOR.**
- 4 CLOSE THE HOOD CAREFULLY TO CHECK FIT, IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND RE-ADJUST UNTIL CENTERED. RE-TIGHTEN WITH SCREW DRIVER.

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

KIT CONTAINS:
HOOD PROTECTOR
6 MOUNTING SCREWS
TOOLS NEEDED:
PHILLIPS SCREWDRIVER

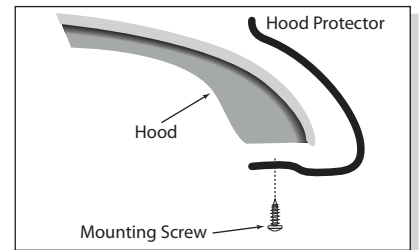


Stampede Products, Inc. • 1924 S. Washington, Blvd. • Camanche, IA. 52730 • Ph 563-259-9189 Fax 563-259-9288 • www.stampedeproducts.com

- 1 RAISE THE HOOD ON THE VEHICLE AND REMOVE DIRT OR DEBRIS.
- 2 LINE UP HOOD THE PROTECTOR WITHE THE FACTORY HOLES ON THE UNDERSIDE OF THE HOOD. SLIDE A SCREW THROUGH EACH OF THE MOUNTING HOLES IN THE HOOD PROTECTOR INTO EACH OF THE HOLES IN THE HOOD. TIGHTEN JUST ENOUGH TO HOLD HOOD PROTECTOR IN PLACE.
- 3 CENTER THE HOOD PROTECTOR ON THE HOOD FROM END TO END AND TIGHTEN THE SCREWS WITH A SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN THIS MAY DAMAGE THE HOOD PROTECTOR.**
- 4 CLOSE THE HOOD CAREFULLY TO CHECK FIT, IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND RE-ADJUST UNTIL CENTERED. RE-TIGHTEN WITH SCREW DRIVER.

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.

KIT CONTAINS:
HOOD PROTECTOR
6 MOUNTING SCREWS
TOOLS NEEDED:
PHILLIPS SCREWDRIVER

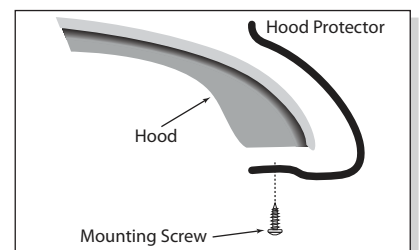

Stampede Products, Inc. • 1924 S. Washington, Blvd. • Camanche, IA. 52730 • Ph 563-259-9189 Fax 563-259-9288 • www.stampedeproducts.com