

- 1 LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2 PUSH THE PLASTIC INSERTS INTO THE EXISTING FACTORY HOLES ON THE UNDERSIDE OF THE HOOD. SNAP INTO PLACE WITH YOUR THUMB OR THE END OF A SCREWDRIVER.
- 3 CENTER THE HOOD PROTECTOR ON THE HOOD AND LINE UP THE MOUNTING HOLES WITH THE PLASTIC INSERTS.
- 4 ONCE YOU ARE SURE OF THE PLACEMENT, HOLD IT IN PLACE AND INSERT THE SCREWS WITH THE WASHERS THROUGH THE HOLES IN THE HOOD PROTECTOR INTO THE PLASTIC INSERTS. TIGHTEN THE SCREWS WITH SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR. CLOSE THE HOOD CAREFULLY TO CHECK THE FIT.


KIT CONTAINS:

HOOD PROTECTOR
5 MOUNTING SCREWS
5 PLASTIC WASHERS
5 PLASTIC INSERTS

TOOLS NEEDED:

PHILLIPS SCREWDRIVER

CLEANING: USE ONLY WARM SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS.

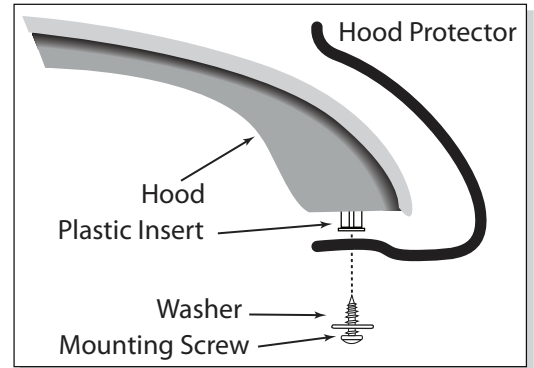

IMPORTANT INFORMATION

AFTER INSTALLING THE HOOD PROTECTOR CHECK FOR FIT. MAKE SURE THE HOOD PROTECTOR IS NOT TOUCHING THE PAINT IN ANY SPOTS THAT MAY CAUSE RUBBING BY VEHICLE VIBRATION AS THIS INDICATES AN IMPROPER INSTALLATION. IF YOUR APPLICATION REQUIRES BUMP-ONS MAKE SURE THEY ARE INSTALLED PROPERLY.

STAMPEDE WILL NOT PAY FOR PAINT TOUCH UPS OR REPAIRS ON HOODS DUE TO IMPROPER INSTALLATION.

IF YOU HAVE A PRODUCT THAT USES ADHESIVE AND HAVE TROUBLE REMOVING THE RED BACKING, USE A DROP OF ISOPROPYL ALCOHOL OR NAPHTHA ON THE EDGE OF THE BACKING. THIS WILL ALLOW THE BACKING TO LOOSEN ALLOWING YOU TO PEEL THE BACKING OFF THE TAPE.

- 1 LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2 PUSH THE PLASTIC INSERTS INTO THE EXISTING FACTORY HOLES ON THE UNDERSIDE OF THE HOOD. SNAP INTO PLACE WITH YOUR THUMB OR THE END OF A SCREWDRIVER.
- 3 CENTER THE HOOD PROTECTOR ON THE HOOD AND LINE UP THE MOUNTING HOLES WITH THE PLASTIC INSERTS.
- 4 ONCE YOU ARE SURE OF THE PLACEMENT, HOLD IT IN PLACE AND INSERT THE SCREWS WITH THE WASHERS THROUGH THE HOLES IN THE HOOD PROTECTOR INTO THE PLASTIC INSERTS. TIGHTEN THE SCREWS WITH SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR. CLOSE THE HOOD CAREFULLY TO CHECK THE FIT.


KIT CONTAINS:

HOOD PROTECTOR
5 MOUNTING SCREWS
5 PLASTIC WASHERS
5 PLASTIC INSERTS

TOOLS NEEDED:

PHILLIPS SCREWDRIVER

CLEANING: USE ONLY WARM SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS.

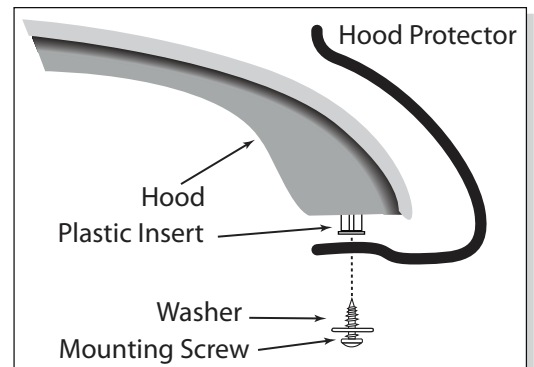

IMPORTANT INFORMATION

AFTER INSTALLING THE HOOD PROTECTOR CHECK FOR FIT. MAKE SURE THE HOOD PROTECTOR IS NOT TOUCHING THE PAINT IN ANY SPOTS THAT MAY CAUSE RUBBING BY VEHICLE VIBRATION AS THIS INDICATES AN IMPROPER INSTALLATION. IF YOUR APPLICATION REQUIRES BUMP-ONS MAKE SURE THEY ARE INSTALLED PROPERLY.

STAMPEDE WILL NOT PAY FOR PAINT TOUCH UPS OR REPAIRS ON HOODS DUE TO IMPROPER INSTALLATION.

IF YOU HAVE A PRODUCT THAT USES ADHESIVE AND HAVE TROUBLE REMOVING THE RED BACKING, USE A DROP OF ISOPROPYL ALCOHOL OR NAPHTHA ON THE EDGE OF THE BACKING. THIS WILL ALLOW THE BACKING TO LOOSEN ALLOWING YOU TO PEEL THE BACKING OFF THE TAPE.