


- 1** LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2** REMOVE THE RUBBER SEAL AND THE CLIPS THAT HOLD IT IN PLACE.
- 3** LINE UP THE HOOD PROTECTOR ON THE UNDERSIDE OF THE HOOD. INSERT THE MOUNTING SCREWS WITH WASHERS IN PLACE THROUGH THE HOOD PROTECTOR AND INTO THE EXISTING HOLES IN THE HOOD. **TIGHTEN JUST ENOUGH TO HOLD HOOD PROTECTOR IN PLACE.** (Fig 1)
- 4** CENTER THE HOOD PROTECTOR ON THE HOOD AND THEN TIGHTEN THE SCREWS WITH SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR.
- 5** CLOSE THE HOOD **CAREFULLY** TO CHECK THE FIT. IF THE HOOD PROTECTOR IS NOT CENTERED, SLIGHTLY LOOSEN THE SCREWS AND MOVE IT TO ONE SIDE OR THE OTHER UNTIL CENTERED AND RE-TIGHTEN THE SCREWS.

KIT CONTAINS:
HOOD PROTECTOR
4 MOUNTING SCREWS
4 PLASTIC WASHERS

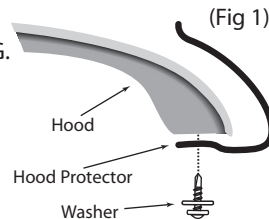

CLEANING YOUR HOOD PROTECTOR: USE ONLY WARM SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS, OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR!