

NO DRILL HOOD PROTECTOR INSTALLATION INSTRUCTIONS


- 1** LIFT THE HOOD AND REMOVE ANY DIRT OR DEBRIS.
- 2** PUSH THE PLASTIC INSERTS INTO THE EXISTING FACTORY HOLES ON THE UNDERSIDE OF THE HOOD. SNAP INTO PLACE WITH YOUR THUMB OR THE END OF A SCREWDRIVER.
- 3** CENTER THE HOOD PROTECTOR ON THE HOOD AND LINE UP THE MOUNTING HOLES WITH THE PLASTIC INSERTS.
- 4** ONCE YOU ARE SURE OF THE PLACEMENT, INSERT THE SCREWS WITH THE WASHERS THROUGH THE HOLES IN THE HOOD PROTECTOR INTO THE PLASTIC INSERTS. TIGHTEN THE SCREWS WITH SCREWDRIVER UNTIL SNUG. **DO NOT OVER TIGHTEN** THIS MAY DAMAGE YOUR NEW HOOD PROTECTOR. CLOSE THE HOOD **CAREFULLY** TO CHECK THE FIT.

KIT CONTAINS:

HOOD PROTECTOR
6 MOUNTING SCREWS
6 PLASTIC WASHERS
6 PLASTIC INSERTS

TOOLS NEEDED:

PHILLIPS SCREWDRIVER

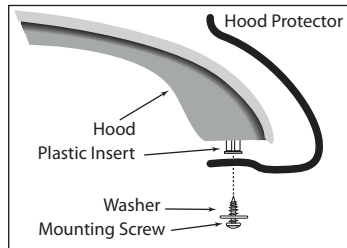

CLEANING: USE ONLY SOAPY WATER AND A SOFT CLOTH. NEVER USE PAPER TOWELS, PETROLEUM PRODUCTS OR SOLVENTS TO CLEAN YOUR HOOD PROTECTOR.