

T-REX

Billet Grilles

20756

03-08 NISSAN

MURANO

BILLET INSERT

20756

03-08 NISSAN

MURANO

BILLET INSERT

Tools Required:

Phillips Screw Driver
10MM Socket / Wrench


Hardware / Parts Included:

- 1 Billet Insert (13 Bars)
- 2 #8 x 1" Screws (#6 Head)
- 2 #8 U-Nuts
- 2 3/4 x 3/4 Spacers

Read and understand instructions before attempting installation

Step 1

If installing a bumper insert when installing the main grille insert, remove the factory grille as described here and then install the bumper insert (Access to the rear of the bumper opening is very limited with the main grille installed). Open the hood and remove the factory plastic fasteners that hold the three-piece header panel in place. Now remove the fasteners that secure the top of the grille shell. There are six plastic clips molded into the grille along the bottom. Depress the clips and remove by pulling the grille shell forward. Apply masking tape to the bottom of the opening. This will prevent scratching the paint on the bumper cover.

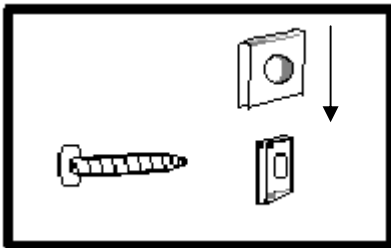

Step 2

Insert the spacers into the U-nuts as shown in the diagram. Now center the billet grille into the opening. Remove the two 10mm bolts on the core support that align with the upper mounting tabs on the billet grille. Along the bottom, place a #8 screw into each mounting tab from the front of the billet insert. These align with the factory mounting holes. Thread a U-nut and spacer onto the screw from the rear of the bumper cover. **Do not tighten the screws at this time.**

Step 3

Now push the top of the billet down so the hood can be closed. Open the hood and re-install the two 10mm bolts. Tighten the lower mounting screws. Close the hood and check the alignment of the grille; adjust if needed.

Step 4

Re-install the three-piece header panel using the factory plastic fasteners. Not all of the factory fasteners are required. *Thank you for purchasing a T-Rex Billet Grille. 3/29/06*