

T-REX

Billet Grilles

25283

06-08 CHEVY
TRAILBLAZER
BUMPER INSERT

25283

06-08 CHEVY
TRAILBLAZER
BUMPER INSERT

2006-08 CHEVY TRAILBLAZER LT (ONLY)

Tools Required:

Phillips Screw Driver
7/16" Wrench

Parts list:


- 1 Billet Insert (7 bars)
- 2 #8 X 1" Screws (#6 Head)
- 2 #8 U-Nuts
- 2 ¼-20 x ¾ Bolts, Nuts & Washers
- 2 'L' Brackets

Read and understand instructions before attempting installation



Step 1.

Slide a u-nut onto the short end of the 'L' Brackets. Attach the other end to a pre-drilled hole in the bumper opening; use the ¼ bolts, nuts and washers. The holes are located next to a plastic fastener on each end.

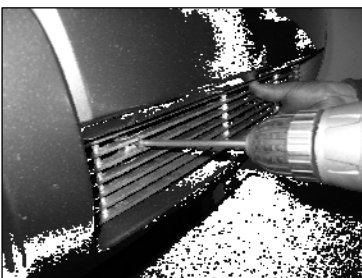

Step 2.

Center the billet into the opening; the mounting tabs align to the 'L' brackets on top. Use the screws to secure the billet to the 'L' brackets. It may be necessary to slightly bend the 'L' brackets so the billet has the proper angle. Remove the grille and adjust the brackets if needed.

Thank you for purchasing a T-Rex billet grille. 12/30/05

