

T-REX

Billet Grilles

25756

06-08 NISSAN

MURANO

BILLET INSERT

25756

06-08 NISSAN

MURANO

BILLET INSERT

Tools Required:

Phillips Screw Driver
Wire Cutters / Snips


Hardware / Parts Included:

- 1 Bumper Insert (9 Bars)
- 2 #8 x 1" Screws (#6 Head)
- 2 #8 U-Nuts
- 2 1.5" J Hooks

Read and understand instructions before attempting installation

Step 1

Access to the rear of the bumper cover is limited. It is recommended to remove the main grille to access the back of the bumper opening for installation. Open the hood and remove the factory plastic fasteners that hold the three-piece header panel in place. Now remove the fasteners that secure the top of the grille shell. There are six plastic clips molded into the grille along the bottom. Depress the clips and remove by pulling the grille shell forward. Remove the license plate holder.

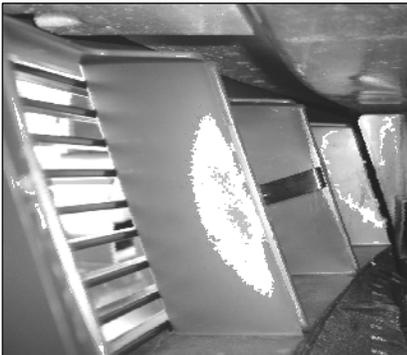

Step 2

Test fit the billet insert into the bumper opening. Slide the U-nuts over the end of the 'J' hooks. Insert a screw into each mounting tab welded to the back of the billet insert. Start to thread the hooks onto the screws. **Do not tighten at this time.** Center the billet into the opening. Make sure the 'J' hooks wrap around the plastic vertical bar in the bumper opening. Now tighten the screws until the billet is held snugly in place.

Step 3

The license plate holder may be reinstalled by cutting the plastic webbing on the back. Remove the vertical webbing (up and down). Re-install the license plate assembly and main grille.

Thank you for purchasing a T-Rex Billet Grille. 12/28/05

