





# 04-06 NISSAN TITAN / ARMADA Bumper Billet - VERTICAL

Tools Required: Phillip Screw Driver

5/16 Wrench


#### Hardware / Parts Included:

- 1 Billet Bumper Insert (49 Bars)
- 4 6-32 x 2" Machine Screws
- 4 6-32 Nylon Lock Nuts
- 4 #6 Washers
- 4 1.5" 'J' Hooks

#### Read and understand instructions before attempting installation

### <u>Step 1</u>

Place a machine screw in each mount on the billet insert. Install a "J" hook from the back with a Nylon lock nut and washer. Center the billet insert into the bumper opening. Install as shown below.

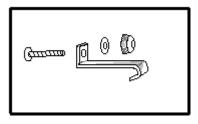

## Step 2

Tighten the nuts down with the "J" hooks catching the rear edge of the bumper cover crossbars. Do not over tighten. *Thank you for purchasing a T-Rex Billet Grille.* 8/22/06