

T-REX

Billet Grilles

80792

03-05 INFINITI

FX 35

80792

03-05 INFINITI

FX 35

1 PC HYBRID SERIES BILLET GRILLE – CHROME

(Will not fit 2006 models)

Recommended Tools:

3/8 Wrench
Phillips Screwdriver
Slotted Screwdriver
Liquid Thread Lock


Parts List / Hardware:

1	Mesh Inserts	1	Top Plate Bracket
7	10-32 x 3/4" Threaded Studs	2	L Brackets
7	10-32 Nylon Lock Nuts		
2	Metal Clips		

Read and understand instructions before attempting installation

Step 1

Remove the four plastic fasteners along the top using a Phillips screwdriver. There are two black plastic retaining fasteners on each end of the grille. Use a slotted screwdriver to twist the fasteners; Pull the grille forwards and release the molded clips along the bottom of the grille. Push the grille from behind to remove. If installing a bumper billet, install the bumper billet and then go to **Step 2** below.

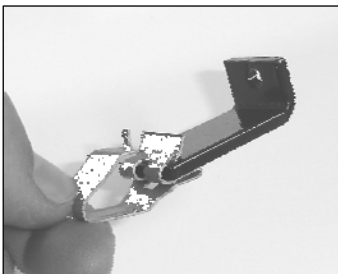

Step 2

Test fit the billet in place. Thread the studs into the mounting holes. A small amount of liquid thread lock may be applied to the threads. **BE SURE NOT OVER-TIGHTEN THE STUDS** (Over-tightening can cause dimpling to the face of the billets). Attach the top plate along the top. This will require bending the plate in an arch. Mount the T-Rex Logo up. Use the lock nuts to secure the plate. Slide the clips onto the short L brackets as shown. Attach the L brackets to the bottom; secure them using the remaining nuts.

Step 3

Slide the lower brackets into the factory mounting holes. Apply a little pressure in front of the lower mounting brackets; press until the clips engage. Attach the top plate to the plastic core support; use the factory hardware to secure the top. It may be necessary to slightly bend the brackets so they align properly.



Step 4

Slowly close the hood to check the clearance between the hood and grille; adjust the grille if needed. It may be necessary to slightly bend the brackets or studs to achieve the proper alignment.

Thank you for purchasing your T-Rex billet grille. 2/27/07