

T-REX

Billet Grilles

85290

03-07 H2
HUMMER

85290

03-07 H2
HUMMER

1 PC HYBRID SERIES BUMPER – CHROME

03-07 HUMMER H2 SUV & SUT


Recommended Tools:

3/8 Wrench or Nut Driver
Slotted Screwdrivers
Jigsaw & Die Grinder or Dremel Tool
Masking Tape / Files / Sandpaper

Parts List / Hardware:

1	Bumper Inserts
3	10-32 Nylon Lock Nuts
3	½" x ½" L Brackets

Read and understand instructions before attempting installation

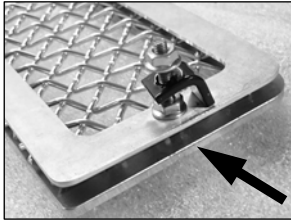


Step 1

Open the hood and remove the grille. Place the grille face up on a work-table. Apply masking tape to the grille.

Step 2

Cut the molded plastic with holes from the grille. Make your cut about 1/8" inside the parting line around this area (***this is necessary to hold the grille in place***). We recommend cutting less rather than more; if too much material is cut, the grille will not secure properly. Test fit the grille into the opening. Remove more material if necessary.

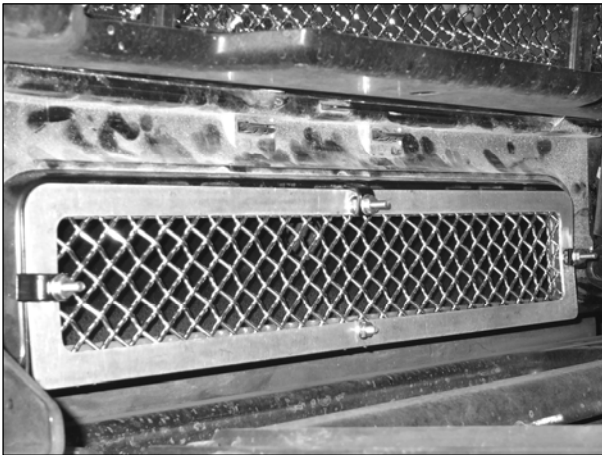

Slide the grille into the bumper opening; the plastic should fit between the two sides of the grille (see arrow in picture above). Attach the L brackets to the top and end mounting studs using the nylon lock nuts; these wrap around plastic edge of the cut the bumper opening. Do not over tighten the L brackets.

Step 3

Re-install the factory grille assembly onto the vehicle.
Thank you for purchasing your T-Rex billet grille.

1/16/05

