



# MODEL SPECIFIC GUIDE

## D-Ring Hinge Version

**Model 1020 Chevy S-10/GMC Sonoma Std/Ext Cab  
6' Short Bed, 1994-2007**






## MODEL SPECIFIC GUIDE D-Ring Hinge Version Model 1020 Chevy S-10/GMC Sonoma 6' Short Bed 1994-2007

### RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 45 1/4" from the back side of the bulkhead to the front edge of the bracket.

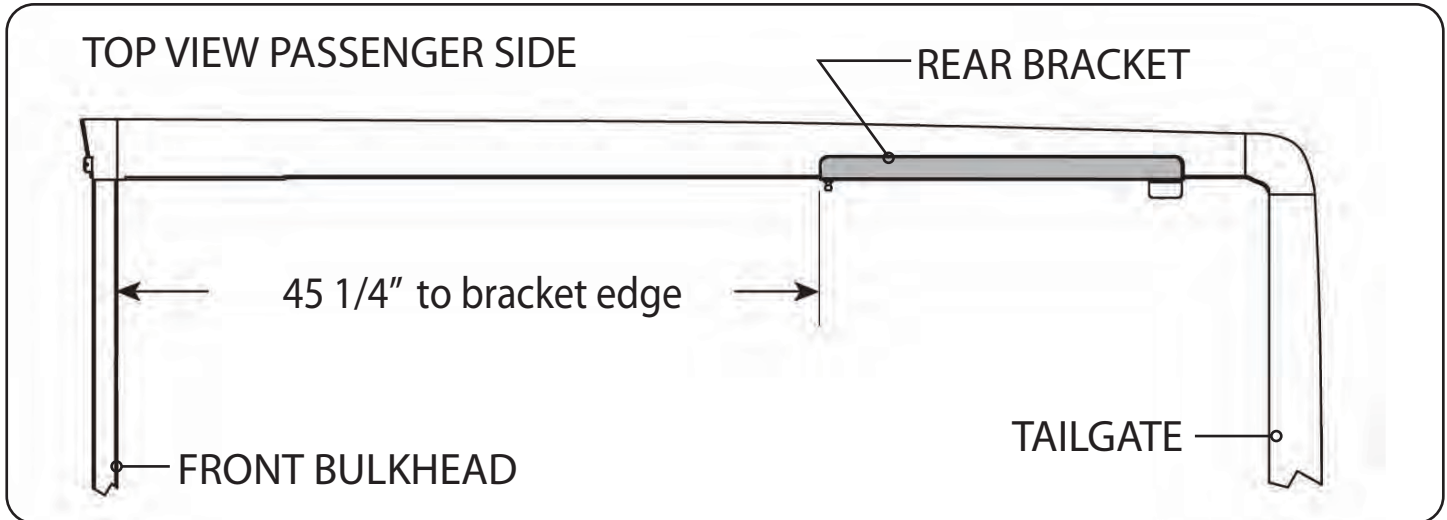

### RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 1/8" gap overhang from the front edge of the bracket to the front edge of the bulkhead.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

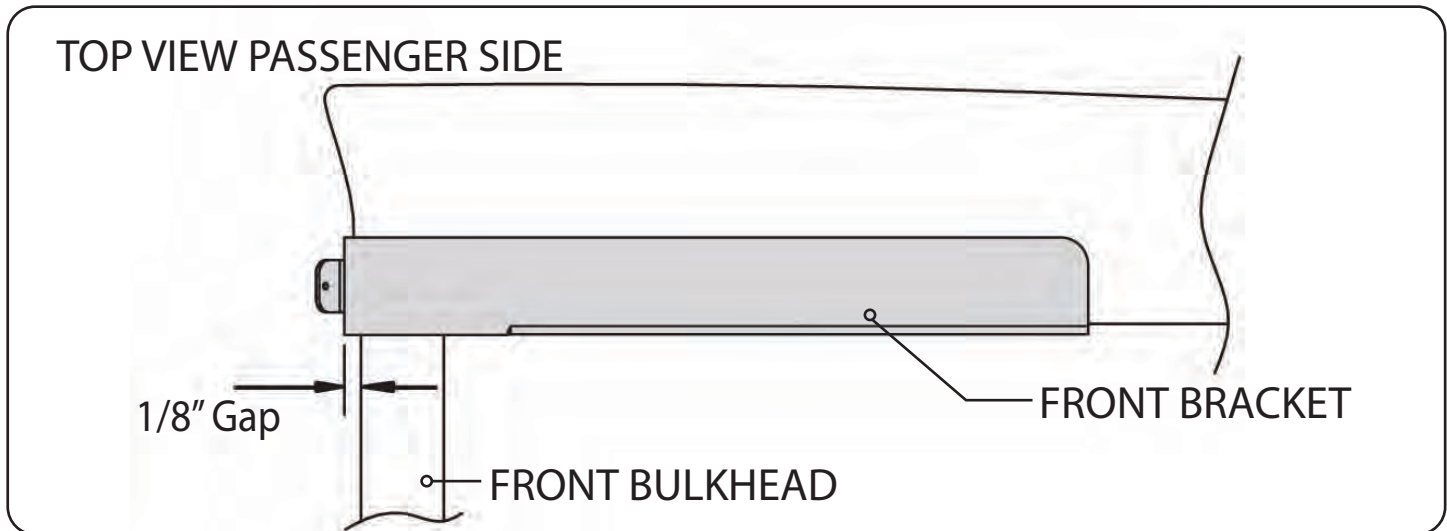

UnderCover, Inc.  
P.O. Box 620  
Rogersville, MO 65742  
(417) 753-8000  
(866) 900-8800

[www.undercoverinfo.com](http://www.undercoverinfo.com)  
[sales@undercoverinfo.com](mailto:sales@undercoverinfo.com)

© 2010 UnderCover, Inc.  
All rights reserved.