



MODEL SPECIFIC GUIDE

D-Ring Hinge Version

**Model 1050 Chevy Colorado/GMC Canyon Std/Ext Cab
6' Short Bed 2004-Current**




Form # AS1050II
Created March 2012

For Warranty Issues, Contact UnderCover Directly
(866) 900-8800 www.undercoverinfo.com

RE: Step 2 on the Quick Start Guide

Measurement for the rear mounting bracket is 44" from the back side of the bulkhead to the front edge of the bracket.

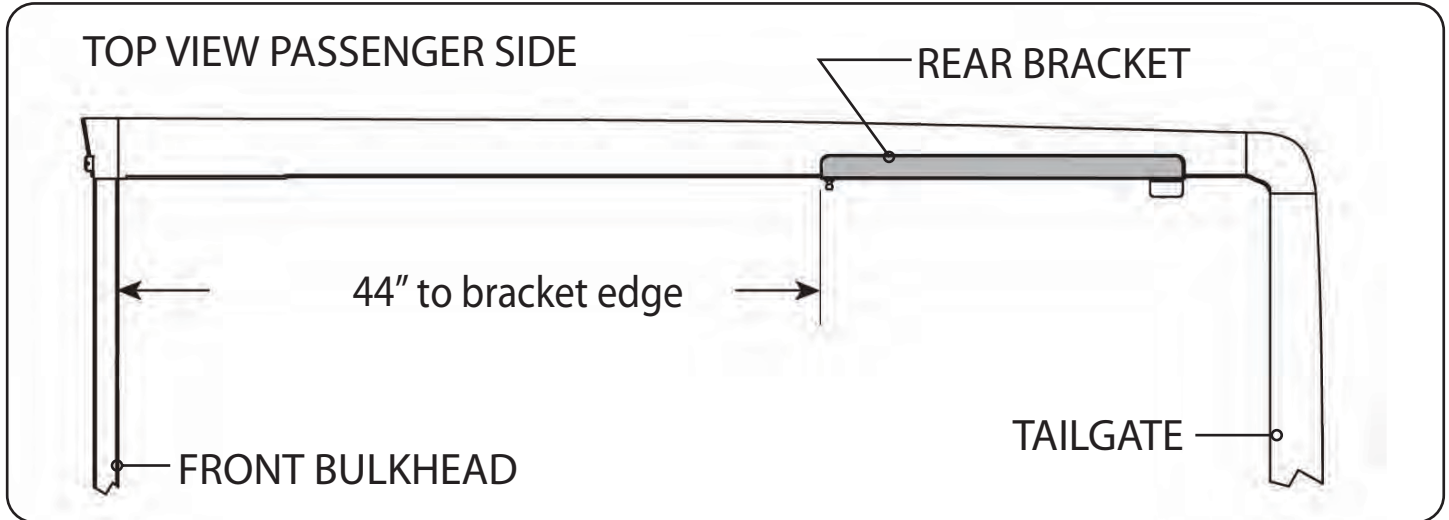

RE: Step 3 on the Quick Start Guide

Mount the front edge of the front mounting bracket flush to the front edge of the bulkhead.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

