



# MODEL SPECIFIC GUIDE

## Hidden Hinge Version

**Model 2120 Ford F250/F350 Ext/Crew Cab**  
**6.5' Short Bed 1999-Current** *(will not fit with tailgate step)*




Note: This Cover will NOT work with the tailgate step.



## MODEL SPECIFIC GUIDE Hidden Hinge Version Model 2120 Ford F-250/F-350 6.5' Short Bed 1999-Current

### RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 55 1/4" from the back side of the bulkhead to the front edge of the bracket.

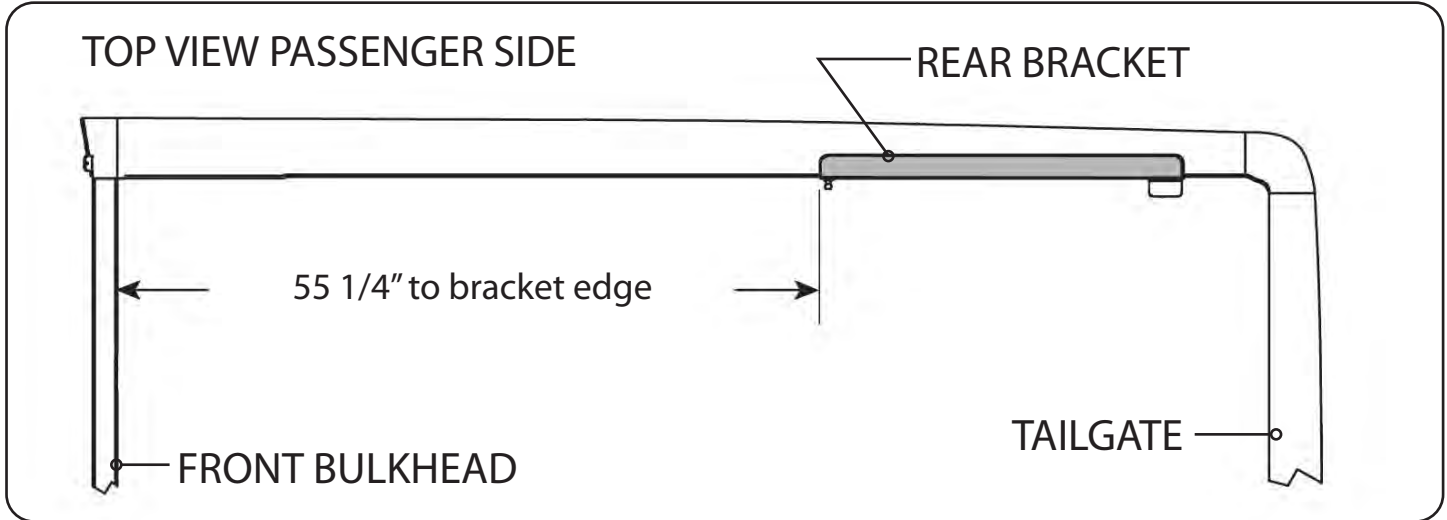

### RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 16 3/4" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

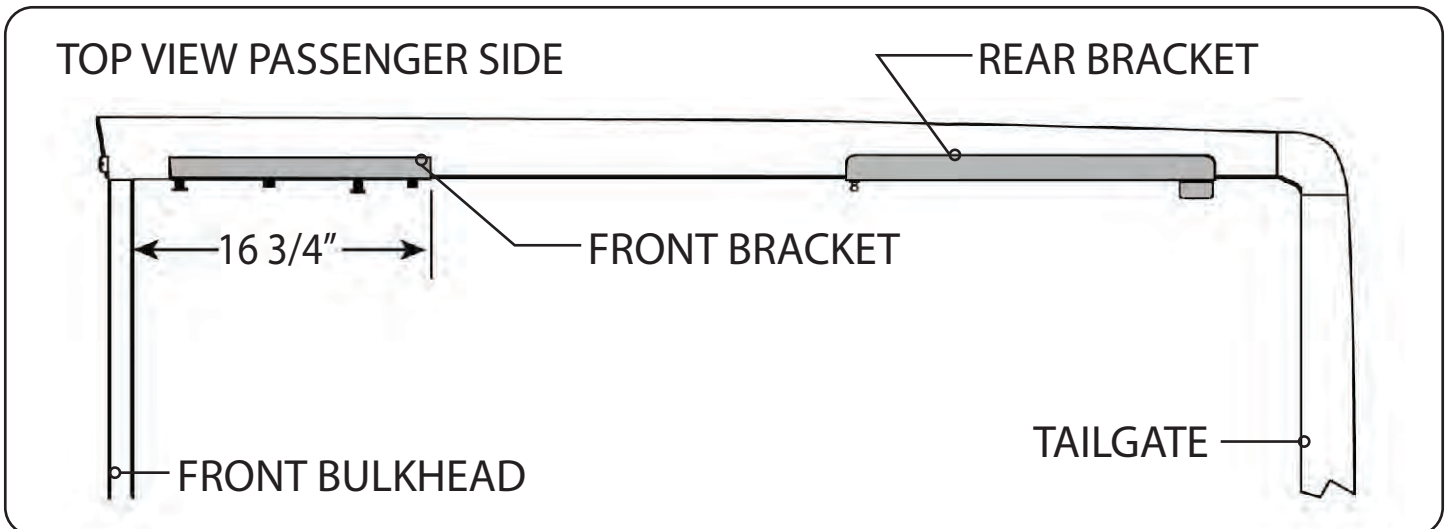

UnderCover, Inc.  
P.O. Box 620  
Rogersville, MO 65742  
(417) 753-8000  
(866) 900-8800

[www.undercoverinfo.com](http://www.undercoverinfo.com)  
[sales@undercoverinfo.com](mailto:sales@undercoverinfo.com)

© 2010 UnderCover, Inc.  
All rights reserved.