



THE NEXT GENERATION OF FOLDING TONNEAU COVERS.

# Model Specific Install Guide

## Multiple Applications - Ford, Mazda, Dodge, Mitsubishi, Isuzu & Volkswagen

FORD/MAZDA  
FX21007  
FX21014  
FX21015


DODGE/MITSUBISHI  
FX31002

ISUZU  
FX61001  
FX61002

VOLKSWAGEN  
FX71000

### 1 Hardware Kit Check List

- A. Clamp kit (6)
- B. Star knob (2)
- C. Front Retainer Clamp (2)
- D. Front Mounting Bolts (2)  
Lock Washer (2), Flat Washer (2)

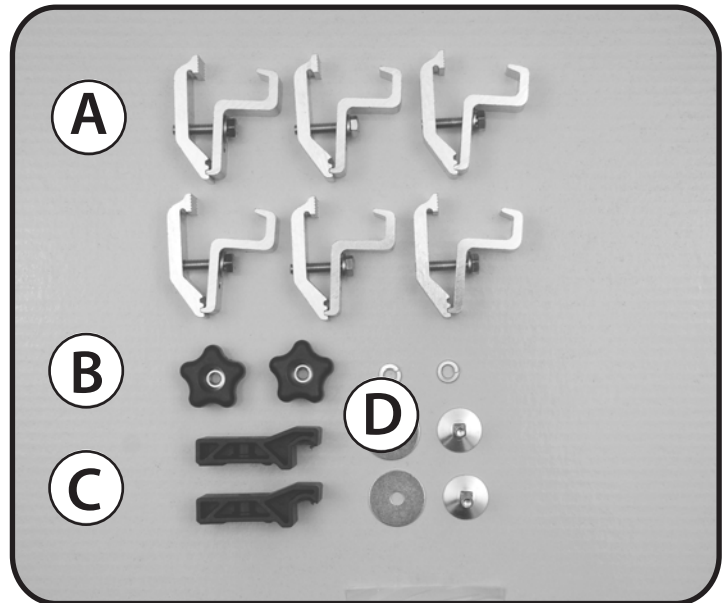

KIT - L





## 2 Attach Side Mounting Rails

Attach both left and right side rails to the truck bed. The end of the mounting rail with the drain tube fitting will go towards the cab of the truck.

Position the top edge of the mounting rail flush to 1/8" above the top edge of your truck bed rail, Figure 1 & 2. Using three (3) clamps per side attach the rail to the bed, position the clamps adjacent to each of the black rail spacers. (Tip: Mount the center clamp first but do not tighten completely. This will give you the ability to adjust the rail as the outer clamps are attached) Tighten the clamps using a 1/2" wrench or socket, Photo A.

*Note: If you discover your truck will not allow you to position a clamp adjacent to the spacer, simply slide the spacer forward or back as needed.*

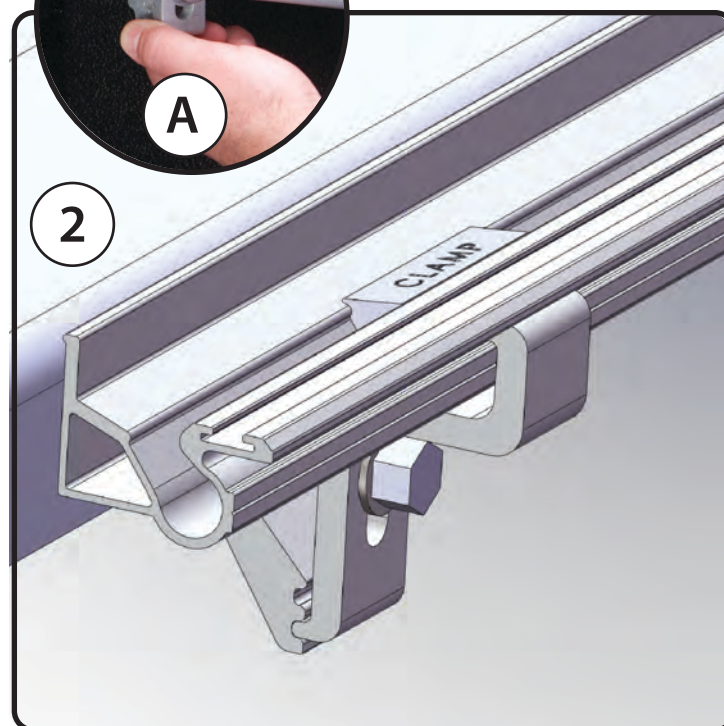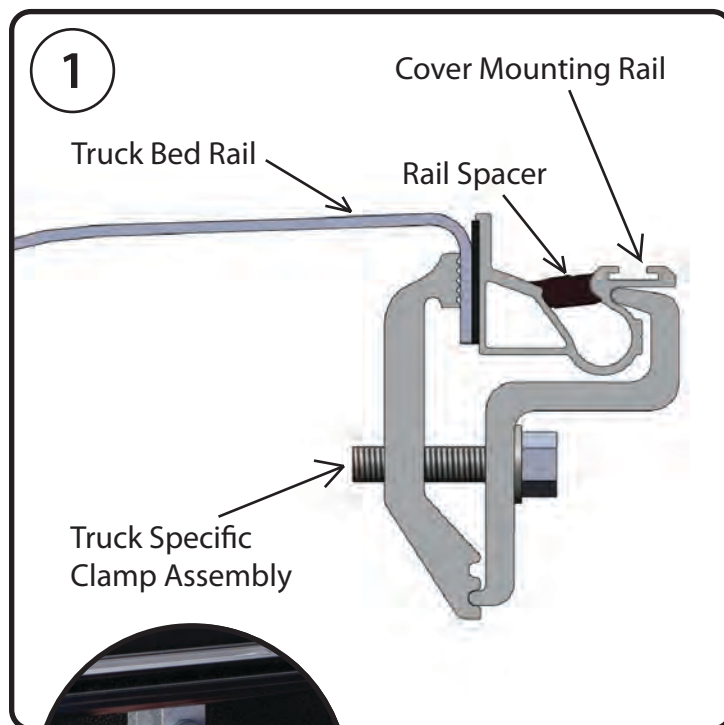

**Warning!** Do not overtighten the clamp assembly. A torque wrench is not necessary. If preferred, torque is apx 120 inch lbs.



**Warning!** Clamps must be checked periodically for tightness. Failure to do so could result in damage to you or your property.