



THE NEXT GENERATION OF FOLDING TONNEAU COVERS.

# Model Specific Install Guide


## Multiple Applications

**Chevy, Ford, Mazda, Dodge, Mitsubishi, Toyota, Nissan & Suzuki**

CHEVY	FORD/MAZDA	DODGE/MITSUBISHI	TOYOTA	NISSAN/SUZUKI
FX11012	FX21000	FX31000	FX41007	FX51003
	FX21002	FX31001	FX41009	FX51004
	FX21004	FX31006	FX41013	FX51005
	FX21010	FX91001		FX51006
	FX21012			

### 1 Hardware Kit Check List

- A. Clamp kit (6)
- B. Star knob (2)
- C. Front Retainer Clamp (2)
- D. Front Mounting Bolts (2)  
Lock Washer (2), Flat Washer (2)
- E. BulkHead Seal

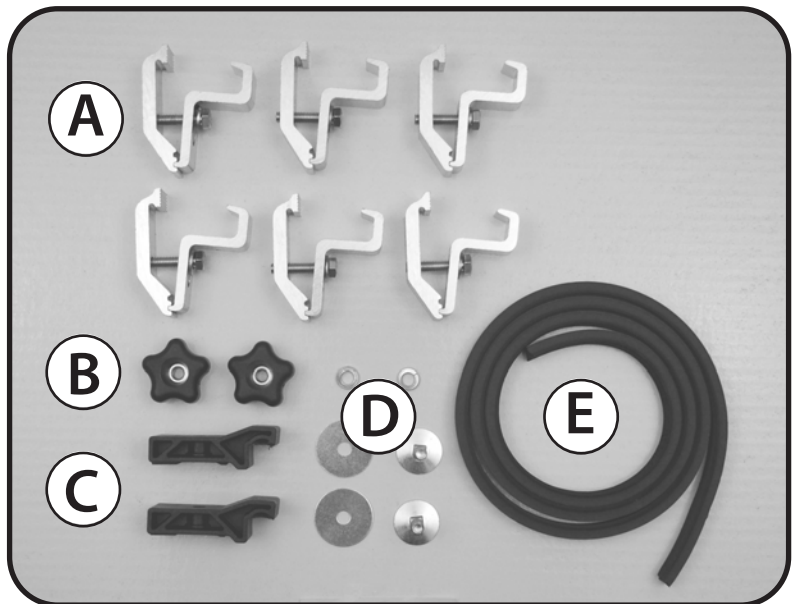

**KIT - M**



### 2 Attach Side Mounting Rails

Attach both left and right side rails to the truck bed. The end of the mounting rail with the drain tube fitting will go towards the cab of the truck.

Position the top edge of the mounting rail flush to 1/8" above the top edge of your truck bed rail, Figure 1 & 2. Using three (3) clamps per side attach the rail to the bed, position the clamps adjacent to each of the black rail spacers. (Tip: Mount the center clamp first but do not tighten completely. This will give you the ability to adjust the rail as the outer clamps are attached) Tighten the clamps using a 1/2" wrench or socket, Photo A.

*Note: If you discover your truck will not allow you to position a clamp adjacent to the spacer, simply slide the spacer forward or back as needed.*

Install the Bulkhead Seal to the front rail of the truck bed and cut to length.



**Warning!** Do not overtighten the clamp assembly. A torque wrench is not necessary. If preferred, torque is apx 120 inch lbs.



**Warning!** Clamps must be checked periodically for tightness. Failure to do so could result in damage to you or your property.

