

**WARN FENDER FLARES  
SPECIAL INSTALLATION INSTRUCTIONS  
1988+ CHEV/GMC FULL SIZE  
PICKUP, BLAZER, TAHOE(2dr), YUKON(2dr)**

**(REAR FLARES ONLY)**


**Important Notes:**

- Warn Fender Flares ***will not fit over*** Chev/GMC factory flares!
- Warn Fender Flares ***will not cover all mounting holes*** required for previously installed Chev/GMC factory flares!

PLEASE READ GENERAL INSTRUCTIONS FIRST

**SPECIAL VEHICLE PREP:**

Remove fender brace bolts on both sides of the vehicle as shown:

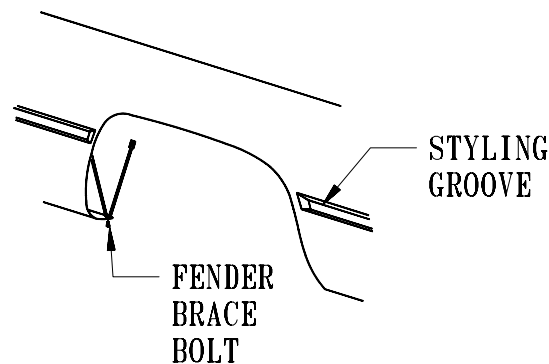

**SPECIAL FLARE PREP:**

Drill one 3/8" hole in the front end bottom of the fender flare at the dimple that corresponds to the location of the fender brace bolt. Drill the usual 3/16" holes at all other dimple locations for the mounting screws provided.

If the right rear flare interferes with the tail pipe, the flare must be trimmed to clear. Trim the flare around the tail pipe so that no part of the flare is closer than 1/2" from the tail pipe. Trim the flare using tin snips initially and sandpaper to finish. Leave no sharp corners in the trimmed area as these corners are areas where stress cracks can start.