



INSTALLATION INSTRUCTIONS ATV WINCH MOUNT

Mount Kit: PN 37812

**Application: SUZUKI QUAD MASTER/QUAD
RUNNER 500**

Your safety, and the safety of others, is very important. To help you make informed decisions about safety, we have provided installation and operating instructions and other information on labels and in this guide. This information alerts you to potential hazards that could hurt you or others. It is not possible to warn you about all potential hazards associated with this product, you must use your own good judgment.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.

This guide identifies potential hazards and has important safety messages that help you and others avoid personal injury or death.

WARNING and **CAUTION** are signal words that identify the level of hazard. These signal words mean:

▲ WARNING signals a hazard that could cause serious injury or death, if you do not follow recommendations.

▲ CAUTION signals a hazard that may cause minor to moderate injury, if you do not follow recommendations.

This guide uses **NOTICE** to call attention to important mechanical information, and **Note**: to emphasize general information worthy of special attention.

WARNING

SEVERE INJURY OR DEATH MAY RESULT IF YOU IGNORE ANY OF THE FOLLOWING.

- **Read the Winch Operator's Manual, ATV Operator's Manual, and all warning labels before operating the winch and ATV.**
- **Stay clear of moving parts and cable. Keep others away when operating the winch.**
- **Inspect the winch mechanism, fasteners, and cable, before operating. Replace all worn or damaged parts before operating.**
- **Make sure the winch is deactivated when leaving the ATV unattended.**

PARTS LIST:


<u>PART NO.</u>	<u>QUANTITY</u>	<u>DESCRIPTION</u>
37831	1	Winch mounting plate
37205	4	U-Bolt 1/4-20
1322	8	Hex Nut 1/4-20
1321	8	Lock Washer, 1/4

INSTRUCTIONS:

STEP 1: Remove the four bolts that attach the skid pan and remove the skidpan.



STEP 2: Place winch up into the frame of the ATV, below and behind the front bumper.

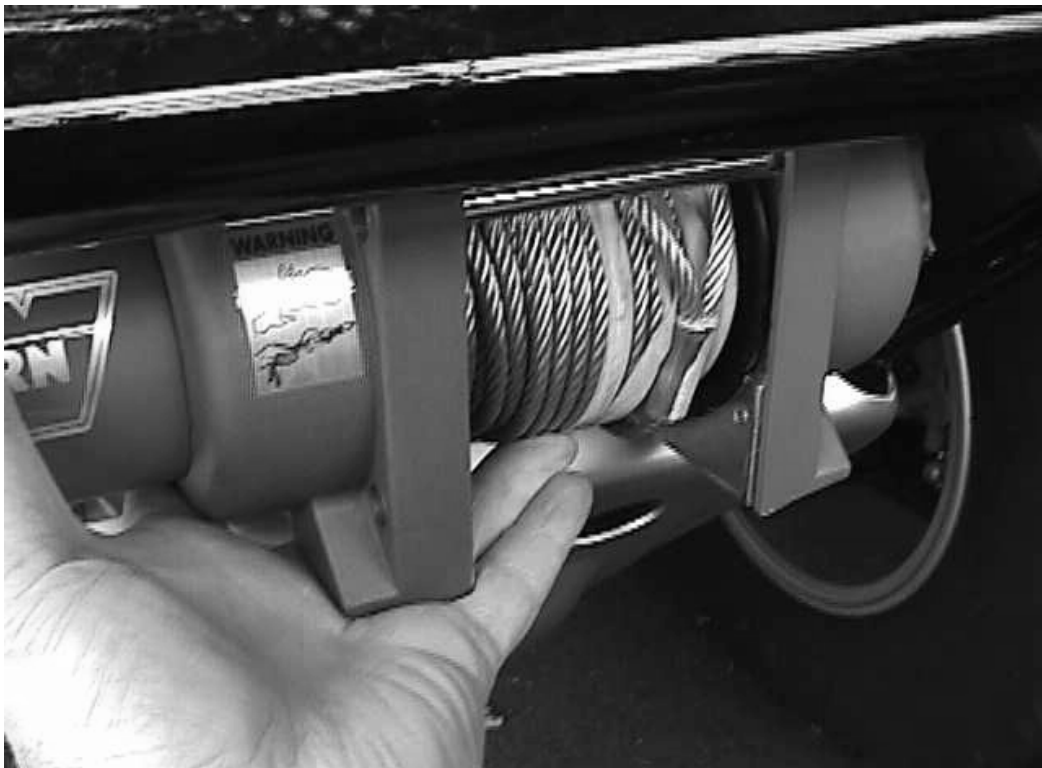


STEP 3: While holding the winch up out of the way, slip the mounting plate into position under the winch. Do not bolt down the winch at this time.



STEP 4: Place the ¼-20 u-bolts into position around the frame and bumper tubes and into the mounting bracket. Tighten with the ¼-20 hex nuts and lock washers.



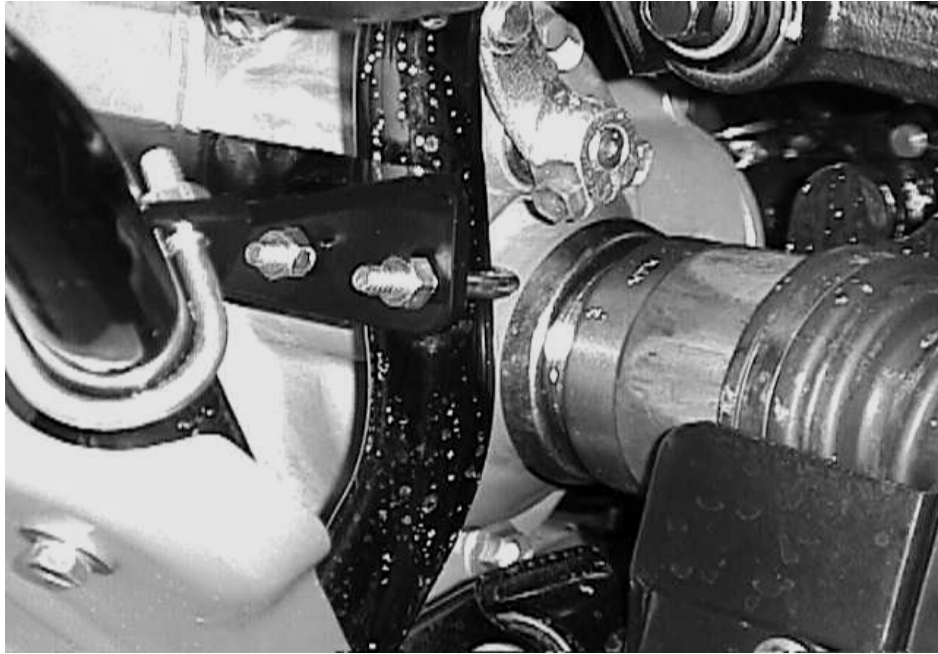

STEP 5: Attach the cast hawse fairlead that came with the winch onto the front two tabs on the mounting plate. The hawse fairlead will have to be removed from the fairlead plate that came with the winch, use the same hardware to attach it to the mounting plate.



Step 6: Attach the winch to the mounting plate with the four 5/16-18 hex cap screws and lock washers that came with the winch. Make sure all fasteners are tightened securely at this time.

Make all electrical connections using the manual that came with the winch as a guide.

NOTE: There is an alternate two hole winch mount configuration (not shown in pictures) on mounting plate. When mounting a winch using these holes use hardware and fairlead plate provided with alternate winch.