



SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2008-2013 NISSAN ROUGE
APP PART # 28-21040, 28-21045
STYLIZED RUNNING BOARD

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	RUNNING BOARDS	16MM SOCKET
2,3	2	FRONT MOUNTING BRACKET (2) DRIVERS SIDE, (3) PASSENGER SIDE	13MM SOCKET
4,5	2	CENTER MOUNTING BRACKET (4) DRIVERS SIDE, (5) PASSENGER SIDE	13MM RATCHET
6,7	2	REAR MOUNTING BRACKET (6) DRIVERS SIDE, (7) PASSENGER SIDE	DRLL
8	2	M8 THREADED BRIDGE NUTS	1/4" DRILL BIT
9	2	M10 'J' BOLTS	TORQUE WRENCH
10	4	M6 HEX HEAD BOLTS	10MM WRENCH
11	8	M6 FLAT WASHERS	10MM SOCKET
12	4	M6 LOCK WASHERS	
13	4	M6 HEX NUTS	
14	2	M8 HEX HEAD BOLTS	
15	6	M8 X 16MM OD FLAT WASHERS	
16	2	M8 LOCK WASHERS	
17	2	M10 FLAT WASHERS	
18	2	M10 LOCK WASHERS	
19	12	M8 SQUARE HEAD BOLTS	
20	12	M8 X 24MM OD FLAT WASHERS	
21	12	M8 NYLOCK NUTS	
22	2	M10 HEX NUTS	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
2. Starting on the drivers side, locate the two factory fasteners underneath the vehicle as shown in Figure 1, remove the fastener that is closest to the front of the vehicle. Take the drivers side front mounting bracket and attach it using the previously removed factory fastener. Do not fully tighten at this time.
3. Next align the front mounting point of the bracket up to the pinch weld (Figure 2). Once aligned straight, mark the holes to be drilled in the pinch weld based on the mounting holes in the bracket. Take your drill and a 1/4" drill bit and drill out the two holes that were marked. Attach the front mounting bracket to the drilled holes using (2) M6 Hex head bolts, (4) M6 Flat washers, (2) M6 Lock washers, and (2) M6 Hex nuts. Do not fully tighten at this time. Repeat this step for the passenger side.
4. Next move to the center of the vehicle and locate the two factory fasteners attaching the splash tray. Remove the factory nut from the front stud (Figure 3) and remove the factory bolt (Figure 4). Take the drivers side center mounting bracket and attach it using (2) M8 x 16mm od Flat washers, and the factory hardware. Do not fully tighten at this time. Repeat this step for the passenger side

CARE INSTRUCTIONS




- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER





Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com


5. Move to the rear of the vehicle and locate the two factory holes shown in Figure 5. Insert (1) M10 J Bolt into the rear hole (Figure 6), and (1) M8 threaded bridge nut through the large oval hole, and place it over the smaller hole in front of it. (Figure 7&8).
6. Take the drivers side rear mounting bracket and attach it to the J bolt using (1) M10 Flat washer, (1) M10 Lock washer, and (1) M10 Hex nut. Attach the bracket to the previously installed bridge nut using (1) M8 Hex head bolt, (1) M8 Lock washer, and (1) M8 Flat washer. Do not fully tighten at this time. Repeat for passenger side
7. Take the drivers side running board and insert (6) M8 Square head bolts into the channels in the bottom of the running board (3 bolts in each channel Figure 9).
8. Lay the running board on the previously installed brackets and align the square head bolts up with the mounting holes in the brackets. Attach the running board to the brackets using (6) M8 Flat washers, and (6) M8 Nylock nuts. Do not fully tighten at this time. Repeat this step for the passenger side.
9. Align and adjust the running board as needed, then fully tighten all hardware at this time. Torque all M10 fasteners to 35-40 ft lbs, and M8 fasteners to 20-25 ft lbs, M8 square head and M6 fasteners to 10-15 ft lbs.

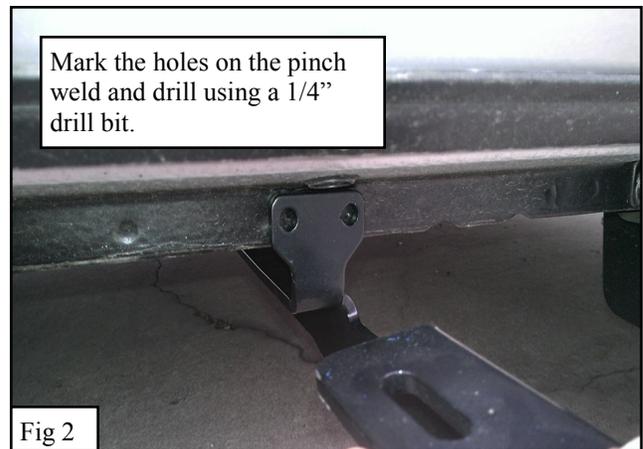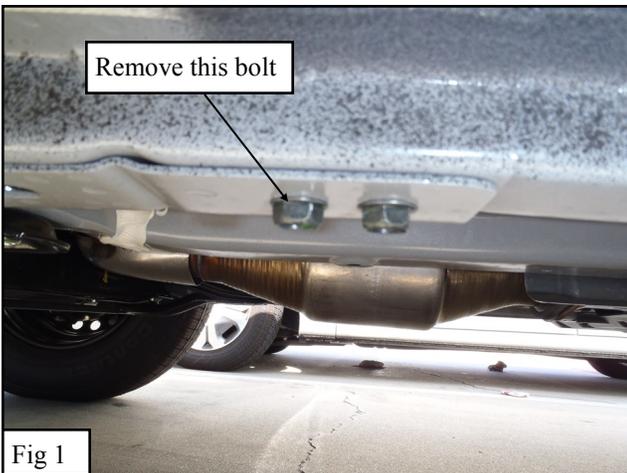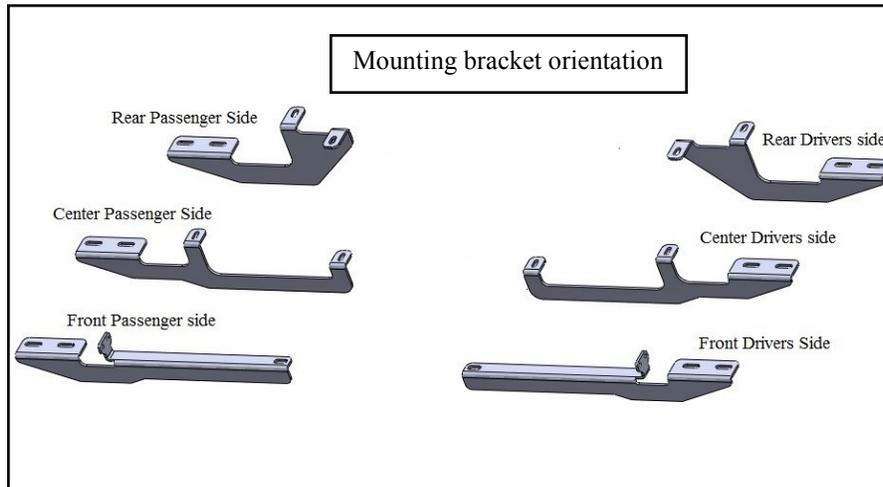

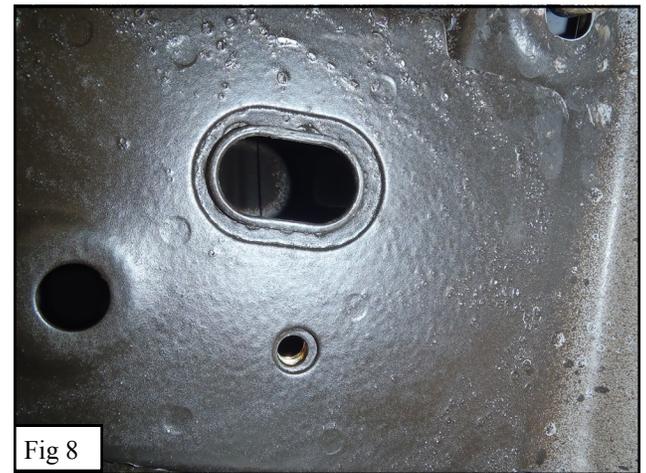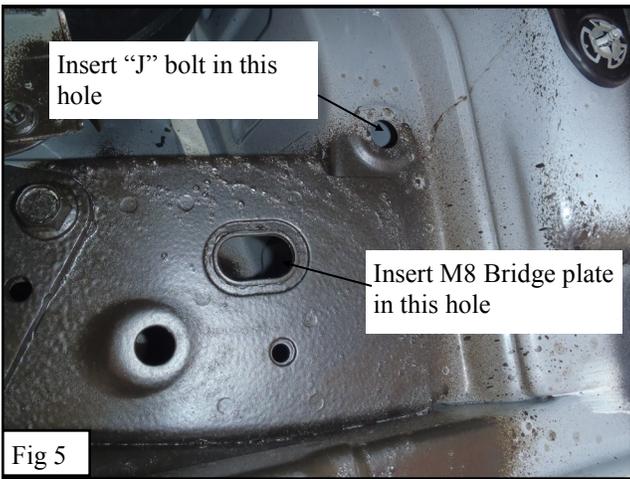

Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com
DATE: 8/15/13

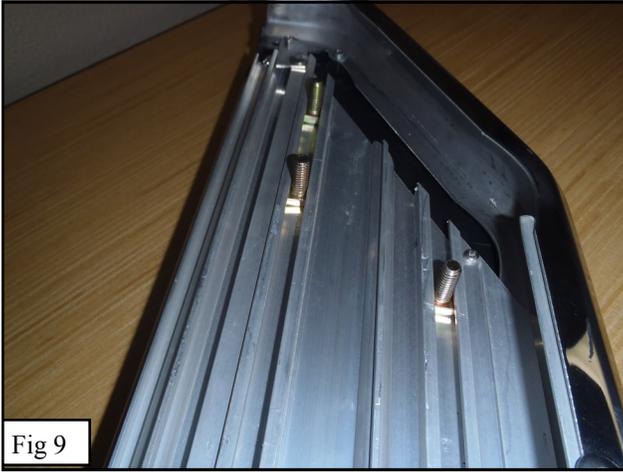

Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

P.N.: 75-0303 Rev B

ECO #: W13-0072

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

DATE: 8/15/13