



AUTOMOTIVE PRODUCTS,

INSTALLATION INSTRUCTIONS

OFFROAD LIGHT BAR

APPLICATION:


2007-2010 Chevrolet Silverado 2500/3500 HD

PART NUMBER:

37-02310, 37-02315


ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	OFFROAD LIGHT BAR	16MM SOCKET
			21MM SOCKET
			RATCHET
			TORQUE WRENCH

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

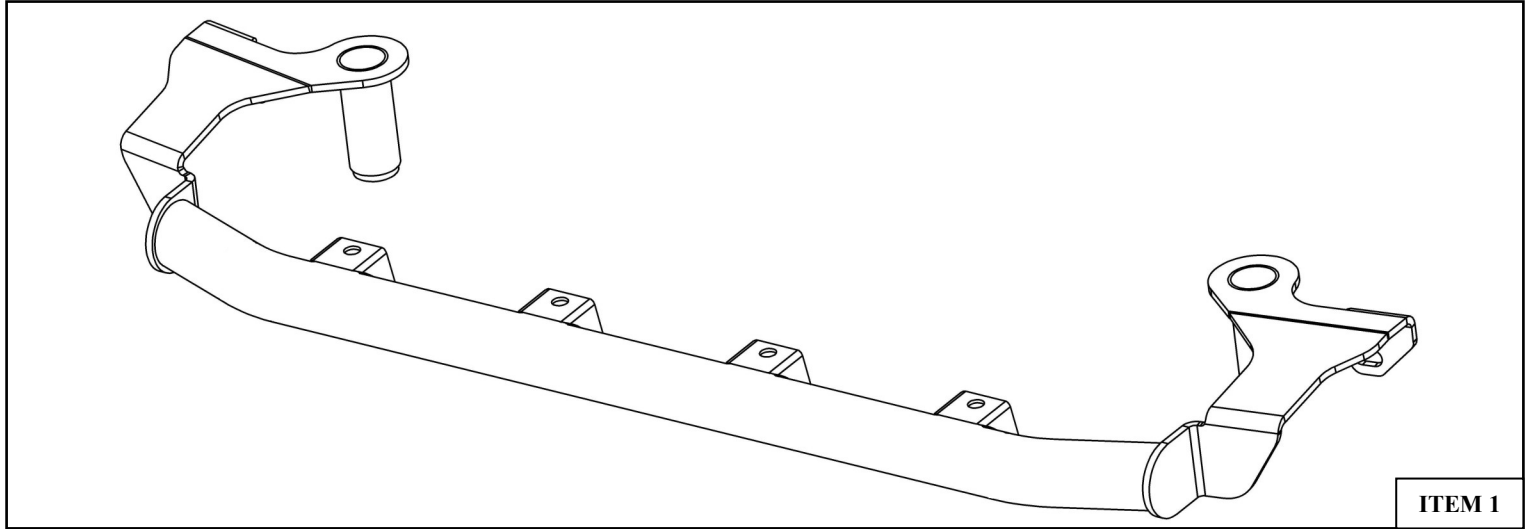

PROCEDURE


1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Open the hood, remove the plastic radiator cover by pulling up all of the factory plastic rivets. **Figure 1**
3. Once the plastic cover has been set aside, remove the grille shell by releasing the retaining pinch clips.
4. Locate the two factory bumper bolts on each side of the bumper and remove them. **Figure 2**

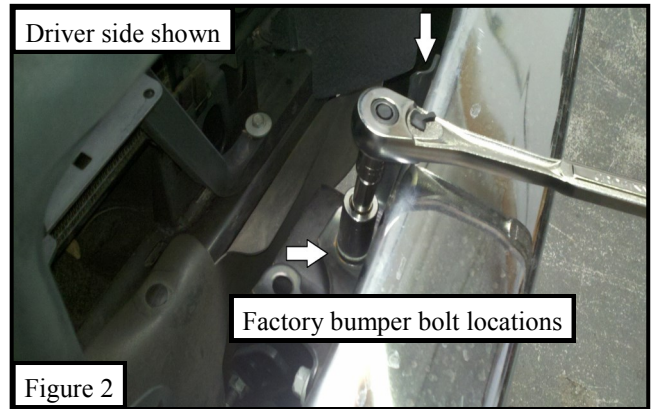

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846

5. Take the light bar and attach it using the previously removed factory hardware. **Figure 3**
6. Fully tighten all hardware at this time. Torque all M10 bolts to 30-35 ft lbs and M14 to 90-95 ft lbs Re-install grille shell and radiator cover at this time

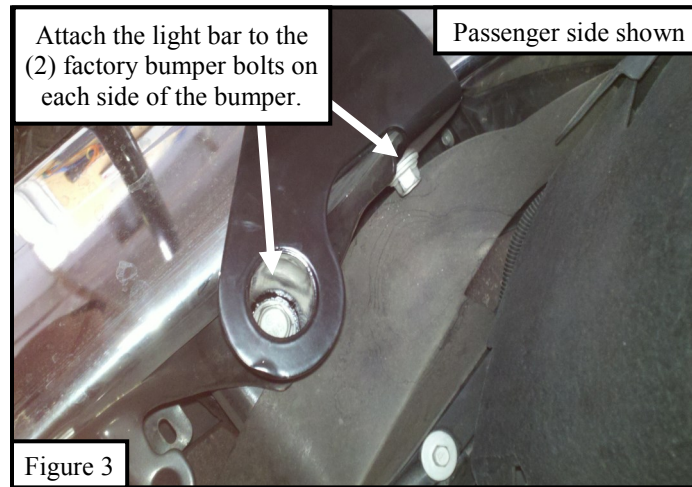

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com