



# INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2008 NISSAN PATHFINDER  
PART # 40-2605

## AUTOMOTIVE PRODUCTS, INC.

ITEM	QTY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	18MM WRENCH
2,3	2	MOUNTING BRACKET (2) DRIVERS SIDE, (3) PASSENGER SIDE	18MM SOCKET
4,5	2	TOP BRACKET (4) DRIVERS SIDE, (5) PASSENGER SIDE	16MM WRENCH
6	4	M12 X 40MM HEX HEAD BOLTS (FINE THREAD)	16MM SOCKET
7	6	M12 X 30MM HEX HEAD BOLTS	TORQUE WRENCH
8	10	M12 LOCK WASHERS	RATCHET
9	16	M12 FLAT WASHERS	
10	6	M12 HEX NUTS	
11	2	M10 X 25MM ALLEN BOLT	
12	2	M10 LOCK WASHER	
13	2	M10 HEX NUTS	
14	2	M10 FLAT WASHER	
15	1	M6 FLANGE NUT	
ITEM	QTY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	18MM WRENCH
2,3	2	MOUNTING BRACKET (2) DRIVERS SIDE, (3) PASSENGER SIDE	18MM SOCKET
4,5	2	TOP BRACKET (4) DRIVERS SIDE, (5) PASSENGER SIDE	16MM WRENCH
6	4	M12 X 40MM HEX HEAD BOLTS (FINE THREAD)	16MM SOCKET
7	6	M12 X 30MM HEX HEAD BOLTS	TORQUE WRENCH
8	10	M12 LOCK WASHERS	RATCHET
9	16	M12 FLAT WASHERS	
10	6	M12 HEX NUTS	
11	2	M10 X 25MM ALLEN BOLT	
12	2	M10 LOCK WASHER	
13	2	M10 HEX NUTS	
14	2	M10 FLAT WASHER	
15	1	M6 FLANGE NUT	
ITEM	QTY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	18MM WRENCH
2,3	2	MOUNTING BRACKET (2) DRIVERS SIDE, (3) PASSENGER SIDE	18MM SOCKET
4,5	2	TOP BRACKET (4) DRIVERS SIDE, (5) PASSENGER SIDE	16MM WRENCH
6	4	M12 X 40MM HEX HEAD BOLTS (FINE THREAD)	16MM SOCKET
7	6	M12 X 30MM HEX HEAD BOLTS	TORQUE WRENCH
8	10	M12 LOCK WASHERS	RATCHET
9	16	M12 FLAT WASHERS	
10	6	M12 HEX NUTS	
11	2	M10 X 25MM ALLEN BOLT	
12	2	M10 LOCK WASHER	
13	2	M10 HEX NUTS	
14	2	M10 FLAT WASHER	
15	1	M6 FLANGE NUT	



Westin Automotive Products, Inc.  
5200 N. Irwindale Ave. Ste 220  
Irwindale, Ca 91706

10/2/09

Thank You for choosing Westin products  
For additional installation assistance please call  
Customer Service (800)793-7846



# INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2008 NISSAN PATHFINDER  
PART # 40-2605

1. Remove all parts from box. Verify all parts listed are present and free from damage. Carefully read and understand all instructions before installation.
2. From underneath the vehicle , remove the 6 bolts holding the center plastic shroud. Cut out the drivers side tow hook cavity, once you have cut the tow hook cavity out cut a 1/2 X 2 gap in the front of each tow hook cavity.
3. Remove the factory tow hook located on the passenger side, once the shroud is cut out reinstall it back on the vehicle using the factory hardware.
4. Take the drivers side mounting bracket and attach it with (2) M12 X 35MM hex head bolts, (2) M12 lock washers, and (2) M12 flat washers. Repeat this step for the passenger side. Do not fully tighten at this time.
5. Through the top of the outer bumper, located on the drivers side remove the factory nut position the drivers side top bracket over the factory threaded stud and secure it using the factory nut. Repeat this step for the passenger side, on the passenger side there is no factory nut use the included M6 flange nut to attach it. Do not fully tighten at this time
6. Position the grille guard on the outer side of the mounting brackets attach grille guard to mounting brackets with, (6) M12 X 30MM hex head bolts, (6) M12 lock washers, (12) M12 flat washers, and (6) M12 hex nuts. Do not fully tighten at this time.
7. Attach the top brackets to the inner side of the grille guard plates using (2) M10 Allen bolts, (2) M10 lock washers, (2) M10 flat washers, and (2) M10 hex nuts.
8. Align grille guard properly making sure it does not interfere with the hood and tighten all hardware

1. Remove all parts from box. Verify all parts listed are present and free from damage. Carefully read and understand all instructions before installation.
2. From underneath the vehicle , remove the 6 bolts holding the center plastic shroud. Cut out the drivers side tow hook cavity, once you have cut the tow hook cavity out cut a 1/2 X 2 gap in the front of each tow hook cavity.
3. Remove the factory tow hook located on the passenger side, once the shroud is cut out reinstall it back on the vehicle using the factory hardware.
4. Take the drivers side mounting bracket and attach it with (2) M12 X 35MM hex head bolts, (2) M12 lock washers, and (2) M12 flat washers. Repeat this step for the passenger side. Do not fully tighten at this time.
5. Through the top of the outer bumper, located on the drivers side remove the factory nut position the drivers side top bracket over the factory threaded stud and secure it using the factory nut. Repeat this step for the passenger side, on the passenger side there is no factory nut use the included M6 flange nut to attach it. Do not fully tighten at this time
6. Position the grille guard on the outer side of the mounting brackets attach grille guard to mounting brackets with, (6) M12 X 30MM hex head bolts, (6) M12 lock washers, (12) M12 flat washers, and (6) M12 hex nuts. Do not fully tighten at this time.
7. Attach the top brackets to the inner side of the grille guard plates using (2) M10 Allen bolts, (2) M10 lock washers, (2) M10 flat washers, and (2) M10 hex nuts.
8. Align grille guard properly making sure it does not interfere with the hood and tighten all hardware

1. Remove all parts from box. Verify all parts listed are present and free from damage. Carefully read and understand all instructions before installation.
2. From underneath the vehicle , remove the 6 bolts holding the center plastic shroud. Cut out the drivers side tow hook cavity, once you have cut the tow hook cavity out cut a 1/2 X 2 gap in the front of each tow hook cavity.
3. Remove the factory tow hook located on the passenger side, once the shroud is cut out reinstall it back on the vehicle using the factory hardware.
4. Take the drivers side mounting bracket and attach it with (2) M12 X 35MM hex head bolts, (2) M12 lock washers, and (2) M12 flat washers. Repeat this step for the passenger side. Do not fully tighten at this time.
5. Through the top of the outer bumper, located on the drivers side remove the factory nut position the drivers side top bracket over the factory threaded stud and secure it using the factory nut. Repeat this step for the passenger side, on the passenger side there is no factory nut use the included M6 flange nut to attach it. Do not fully tighten at this time
6. Position the grille guard on the outer side of the mounting brackets attach grille guard to mounting brackets with, (6) M12 X 30MM hex head bolts, (6) M12 lock washers, (12) M12 flat washers, and (6) M12 hex nuts. Do not fully tighten at this time.
7. Attach the top brackets to the inner side of the grille guard plates using (2) M10 Allen bolts, (2) M10 lock washers, (2) M10 flat washers, and (2) M10 hex nuts.
8. Align grille guard properly making sure it does not interfere with the hood and tighten all hardware



Westin Automotive Products, Inc.  
5200 N. Irwindale Ave. Ste 220  
Irwindale, Ca 91706

Thank You for choosing Westin products  
For additional installation assistance please call  
Customer Service (800)793-7846



# Westin

SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

## INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2008 NISSAN PATHFINDER  
PART # 40-2605

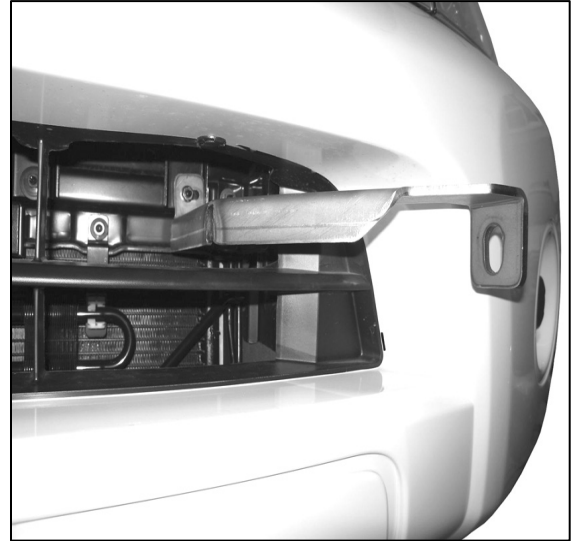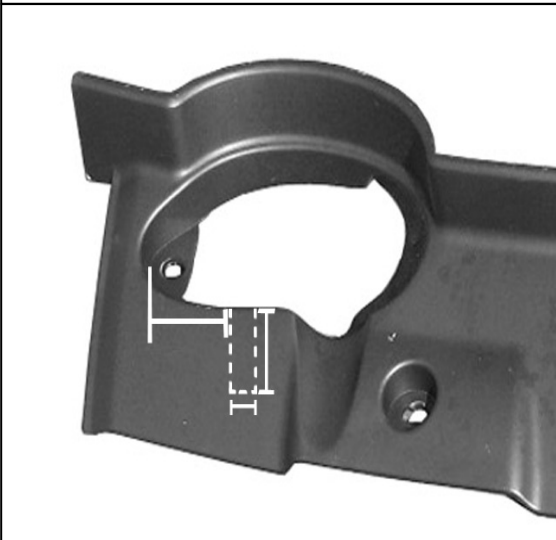

# Westin

SIGNATURE OF QUALITY

Westin Automotive Products, Inc.  
5200 N. Irwindale Ave. Ste 220  
Irwindale, Ca 91706

10/2/09

3

Thank You for choosing Westin products  
For additional installation assistance please call  
Customer Service (800)793-7846

75-0955