


## INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

## APPLICATION:NISSAN PATHFINDER 99.5-2004 PART# 40-0825-45-0820

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	19MM SOCKET AND RACHET
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSEN- GER SIDE	17MM SOCKET AND RACHET
4,5	2	TOP BRACKETS (4) DRIVERS SIDE, (5) PASSENGER SIDE	11MM SOCKET AND RACHET
6	6	M12 X 40MM HEX HEAD BOLTS	TORQUE WRENCH
7	4	M10 X 40MM HEX HEAD BOLTS	
8	8	M10 SS WASHERS	
9	4	M10 NYLOCK NUTS	
10	12	M12 WASHERS	
11	6	M12 NYLOCK NUTS	
12	2	M6 BUTTON HEAD BOLTS	
13	2	M6 NYLOCK NUTS	
14	4	M6 SS WASHERS	

- 1. Remove all contents from box, make sure all parts listed are present and free from damage. Carefully read and understand all instruction before attempting installation.
- 2. Look underneath the front of the vehicle, locate and remove the three factory bolts on each side. **NOTE:** The Mounting Brackets will mount to the frame-cross-member
- 3. Locate driver side Mounting Bracket and attach it to vehicle using the included Metric bolts as illustrated in figure below. Do not tighten at this time.
- 4. Repeat steps 1 & 2 for passenger side Mounting Bracket.
- 5. Once the Mounting Brackets are installed, with help position the Grille Guard on the outer side of Mounting Brackets. Attach Grille Guard to Mounting Brackets using the included (4) M12 Hex Head Bolts, (8) M12 Flat Washers, and (4) M12 Nylock Nuts as shown in figure below.
- 6. Look inside the upper bumper opening and notice the two factory bolts with nuts in front of the radiator. Position the Top Bracket as shown in figure below, and then remove the nut that lines up with the bracket hole on each bracket. Attach Top Bracket to vehicle using the same nuts removed in this step.
- 7. Attach the Top Bracket to vertical plate on Grille Guard using the included (2) M6 Button Head Bolts, (2) M6 Hex Head Nylocks, and (4) M6 Flat Washers.
- 8. Align the Grille Guard; then tighten all hardware at this time.





Thank You for choosing Westin products
For additional installation assistance please call
Customer Service (800)793-7846
www.westinautomotive.com



## INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION:NISSAN PATHFINDER 99.5-2004 PART# 40-0825-45-0820

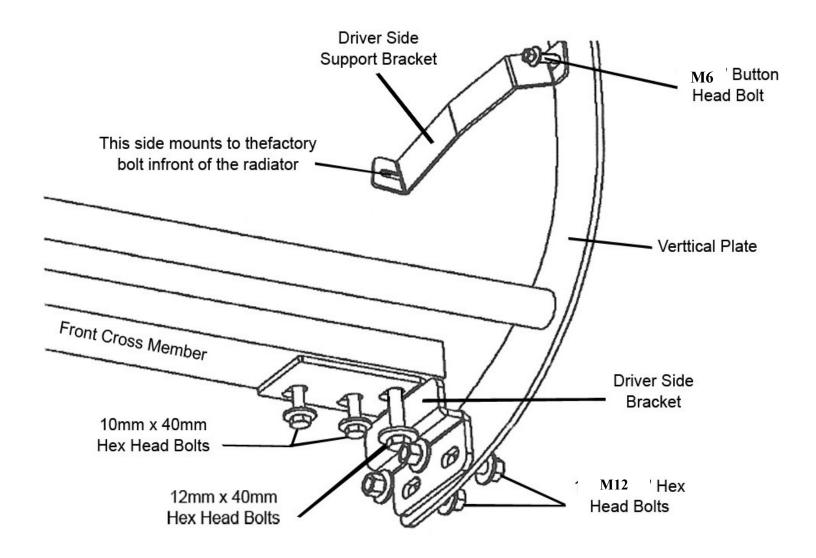



Thank You for choosing Westin products For additional installation assistance please call Customer Service (800)793-7846 www.westinautomotive.com