




**AUTOMOTIVE PRODUCTS, INC.**

# INSTALLATION INSTRUCTIONS

**APPLICATION:** 2003-05 CHEVY Silverado 1500/2500LD;  
2003-04 CHEVY Silverado 2500HD/3500;  
2003-06 CHEVY Avalanche w/ out cladding

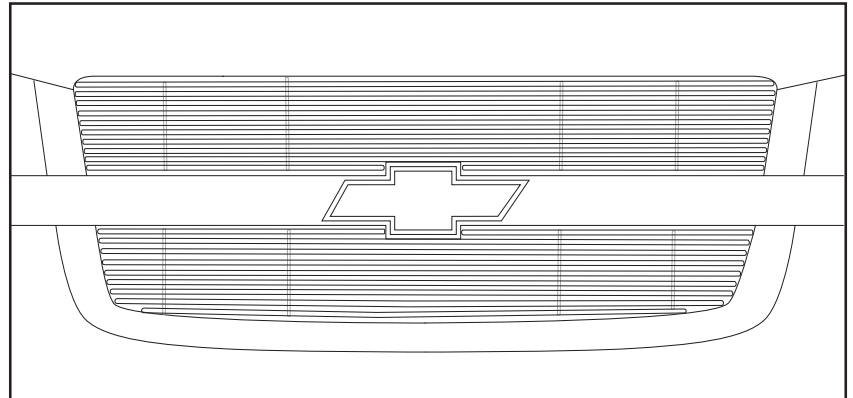


<b>BILLET GRILLE</b>		<b>TOOLS REQUIRED</b>
HORIZONTAL	34-0010	Phillips Screwdriver 7mm Wrench
<b>QTY</b>	<b>HARDWARE CONTENTS</b>	
2	BILLET GRILLE - 2 Inserts	
8	M4 x 25MM PHILLIPS SCREWS	
8	M4 FLANGE NUTS	
8	METAL BRACKETS - FLAT	

## PRODUCT INSTALLATION:

1. Verify all hardware contents listed above are present. Carefully read all Instructions before installing.
2. Open hood and carefully remove OE plastic shroud to gain access behind OE Grille.  
**NOTE:** Do not discard OE hardware, needs to be re-installed. **SEE FIGURE 1**
3. Position the smaller Billet Grille insert (Bottom) over existing OE grille and insert 4 M4 x 25mm screws through existing holes on Billet Grille. From behind the OE grille, loosely fasten all screws using 4 metal brackets and 4 M4 flange nuts.  
**NOTE:** The metal brackets and flange nuts are attached from behind the OE Grille.  
Repeat step 3 on the larger Billet Grille insert (Top) insert. **SEE FIGURE 2**
4. Align Billet Grille and secure all fasteners starting with the center sections. Re-install plastic shroud removed in step 2.  
**NOTE:** DO NOT OVERTIGHTEN HARDWARE.

**FIGURE 1 - O.E. Plastic Shroud**

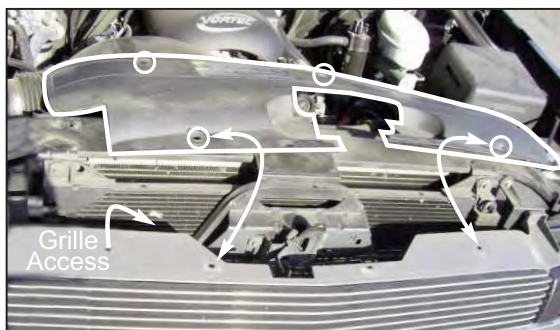

**FIGURE 2 - Billet Grille Insert Top/Bottom**

