




INSTALLATION INSTRUCTIONS

APPLICATION: 2006-07 NISSAN TITAN;
2006-07 NISSAN ARMADA

AUTOMOTIVE PRODUCTS, INC.

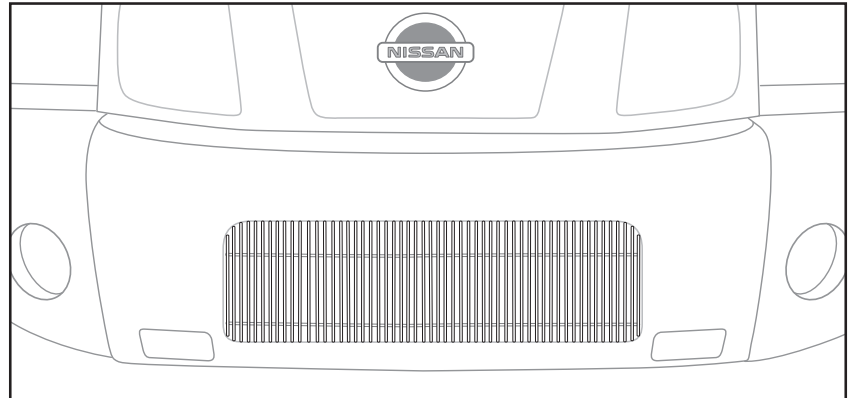

BUMPER INSERT		TOOLS REQUIRED
VERTICAL	34-5490	Phillips Screwdriver 7mm Wrench
QTY	HARDWARE CONTENTS	
1	BUMPER INSERT - 1 Insert	
4	M4 x 70MM PHILLIPS SCREWS	
4	M4 FLANGE NUTS	
2	METAL BRACKETS	

PRODUCT INSTALLATION:

1. Verify all hardware contents listed above are present. Carefully read all Instructions before installing.
2. Position the Bumper Insert over bumper shell cavity. **SEE FIGURE 1**
3. Attach the Bumper Insert by inserting the M4 x 70mm phillips screws through the front of bumper insert. From behind bumper shell cavity (access from under vehicle) place the metal brackets over the bumpers shell cavity outer edge. **SEE FIGURE 2**
4. Align the screws with the pre-drilled holes on metal brackets and loosely secure the screws to the metal brackets using the M4 flange nuts. **SEE FIGURE 2**
5. Align the Bumper Insert to the desired position and fasten all hardware evenly.
NOTE: DO NOT OVERTIGHTEN HARDWARE.

FIGURE 1 - Front view of bumper shell cavity



FIGURE 2 - Rear view of bumper shell cavity

