




INSTALLATION INSTRUCTIONS

APPLICATION: 2006-07 CHEVY Silverado Classic 1500;
2005-07 Silverado Classic 2500HD/3500

AUTOMOTIVE PRODUCTS, INC.

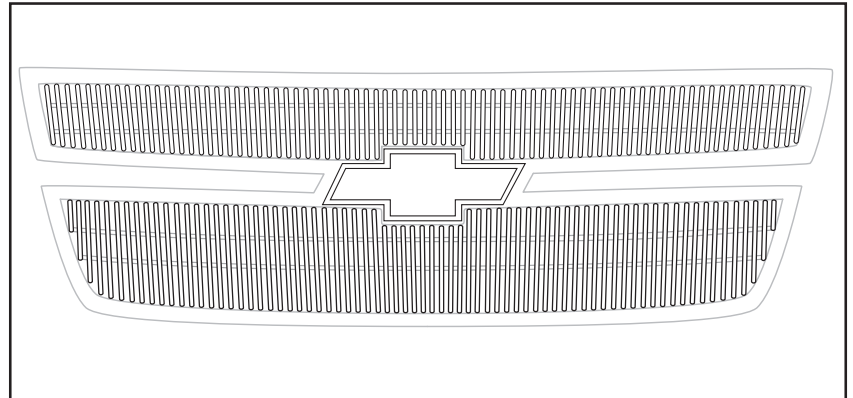

BILLET GRILLE		TOOLS REQUIRED
VERTICAL	34-5540	Phillips Screwdriver 7mm Wrench
QTY	HARDWARE CONTENTS	
2	BILLET GRILLE - 2 Inserts	
8	M4 x 25MM PHILLIPS SCREWS	
8	M4 FLANGE NUTS	
8	METAL BRACKETS - FLAT	

PRODUCT INSTALLATION:

- Verify all hardware contents listed above are present. Carefully read all Instructions before installing.
OPTIONAL: Using factory instructions, remove OE Grille to install Billet Grille.
- Open hood and carefully remove OE plastic shroud to gain access behind OE Grille.
NOTE: Do not discard OE hardware, needs to be re-installed. **SEE FIGURE 1**
- Position the larger Billet Grille insert (Bottom) over existing OE grille and insert 4 M4 x 25mm phillips screws through existing holes on Billet Grille. From behind the OE grille, loosely fasten all screws using 4 metal brackets and 4 M4 flange nuts.
NOTE: The metal brackets and flange nuts are attached from behind the OE Grille.
Repeat step 3 on the Top Billet Grille insert. **SEE FIGURE 2**
- Align Billet Grille and secure all fasteners starting with the center sections. Re-install plastic shroud removed in step 2.
NOTE: DO NOT OVERTIGHTEN HARDWARE.

FIGURE 1 - O.E. Plastic Shroud

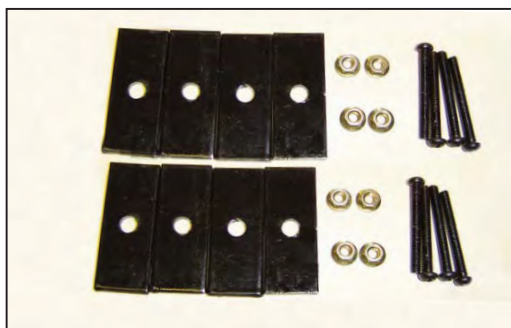


FIGURE 2 - Billet Grille Insert Top/Bottom

