




AUTOMOTIVE PRODUCTS, INC.

INSTALLATION INSTRUCTIONS

APPLICATION: 2007 CHEVY SUBURBAN;
2007 CHEVY TAHOE;
2007 CHEVY AVALANCHE

BILLET GRILLE		TOOLS REQUIRED
VERTICAL	34-5740	Phillips Screwdriver 7mm Wrench
QTY	HARDWARE CONTENTS	
1	BILLET GRILLE	
12	M4 x 25MM PHILLIPS SCREWS	
12	M4 FLANGE NUTS	
12	METAL BRACKETS - FLAT	

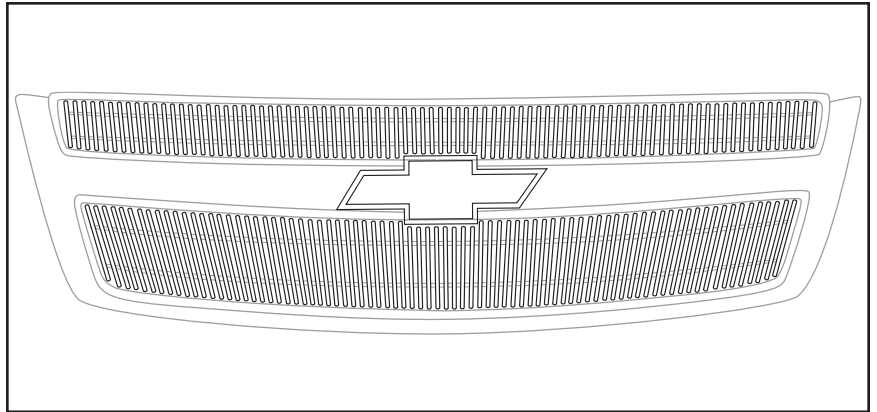

PRODUCT INSTALLATION:

1. Verify all hardware contents listed above are present. Carefully read all Instructions before installing.

OPTIONAL: Using factory instructions, remove OE Grille to install Billet Grille.

2. Open hood and carefully remove OE plastic shroud to gain access behind OE Grille.

NOTE: Do not discard OE hardware, needs to be re-installed. **SEE FIGURE 1**

3. Position the larger Billet Grille insert (Bottom) over existing OE grille and insert 8 M4 x 25mm screws through existing holes on Billet Grille. From behind the OE grille, loosely fasten all screws using 8 metal brackets and 8 M4 flange nuts.

NOTE: The metal brackets and flange nuts are attached from behind the OE Grille.

Repeat step 3 on the Top Billet Grille insert. **SEE FIGURE 2**

4. Align Billet Grille and secure all fasteners starting with the center sections. Re-install plastic shroud removed in step 2.

NOTE: DO NOT OVERTIGHTEN HARDWARE.

FIGURE 1 - O.E. Plastic Shroud



FIGURE 2 - Billet Grille Insert/Bottom

