




INSTALLATION INSTRUCTIONS

APPLICATION: 2006-07 TOYOTA FJ CRUISER

AUTOMOTIVE PRODUCTS, INC.

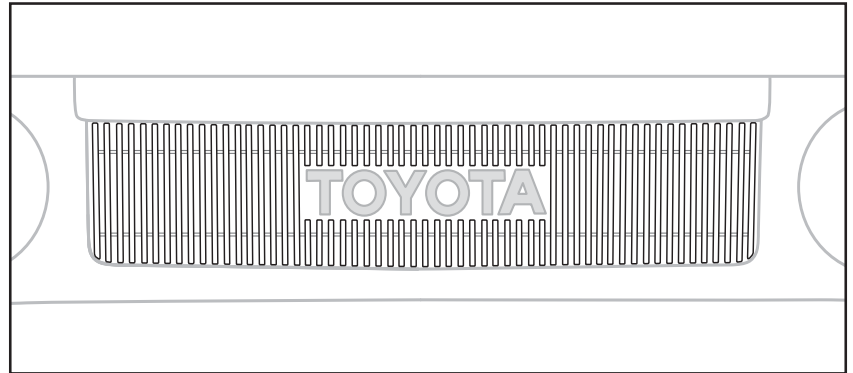

BILLET GRILLE		TOOLS REQUIRED
VERTICAL	34-5830	Phillips Screwdriver 7mm Wrench
QTY	HARDWARE CONTENTS	
1	BILLET GRILLE	
4	M4 x 30MM PHILLIPS SCREWS	
4	M4 FLANGE NUTS	
4	METAL BRACKETS - FLAT	

PRODUCT INSTALLATION:

1. Verify all hardware contents listed above are present. Carefully read all Instructions before installing.
2. Open hood to access the backside of OE Grille. Position the billet grille over existing OE Grille and insert the 4 M4 x 30mm screws through the existing holes on front side of billet grille. Fasten screws by using the provided Metal Brackets and M4 Flange Nuts from back side of OE Grille. **NOTE:** Do not fully tighten screws at this time. **SEE FIGURE 1**
3. Align the billet grille to desired position and tighten all fasteners evenly. **SEE FIGURE 2**
NOTE: DO NOT OVERTIGHTEN HARDWARE.

FIGURE 1 - Brackets / M4 Flange Nuts

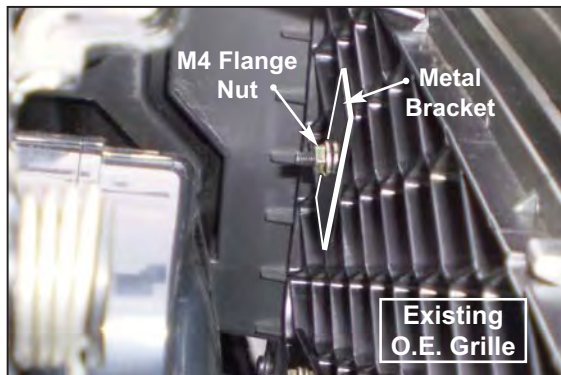


FIGURE 2 - Align billet grille and fasten evenly

