



INSTALLATION INSTRUCTIONS

APPLICATION: 1994-04 FORD F250/350/450/550HD Superduty

AUTOMOTIVE PRODUCTS, INC.


REPLACEMENT GRILLE

MESH INSERT 34-9210

TOOLS REQUIRED

Phillips Screwdriver

Standard Screwdriver

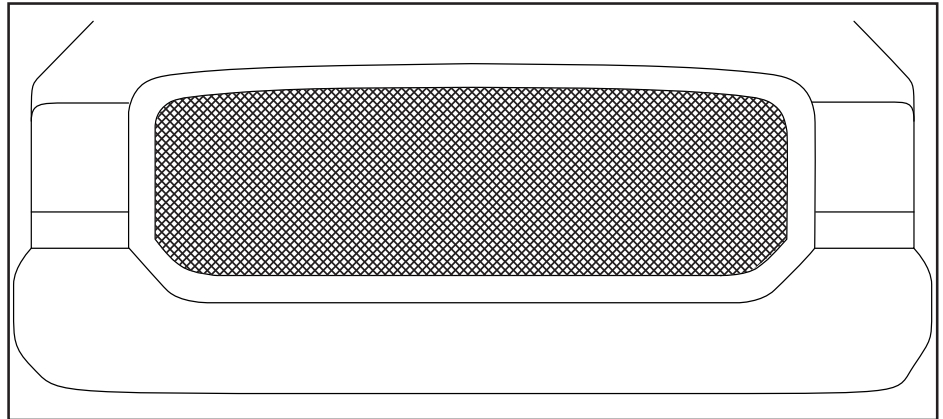

PRODUCT INSTALLATION:

1. Verify all hardware contents listed above are present. Carefully read all Instructions before installing.
2. Open hood to access the top edge of OE Grille Shell. Remove the 4 phillips-head screws running along the top edge of the OEgrille shell. **SEE FIGUR 1**
NOTE: Do not discard OE Hardware, they will be re-used to install the New Replacement Grille.
3. Unfasten the 5 OE compression clips running along the bottom of the OE grille between the bumper and OE grille. Insert a flat-head screwdriver between the compression clip and the plastic mount point and turn to release. **SEE FIGURE 2 & 3**
4. To install the Replacement Grille, align the 5 compression clips along the bottom of the grille to the existing mounting points of the vehicle. Starting from either side, insert the clip until it locks into place within the housing.

FIGURE 1 - OE Hardware



FIGURE 2 - Compression Clips



FIGURE 3 - Installation Procedure

