



**INSTALLATION INSTRUCTIONS**  
Tail Light Guard P/N. 39-3000/39-3005  
88-98 Chevy CK P/U,  
92-99 Suburban/Yukon/Tahoe  
(Doesn't Fit Dual Rear Door)

**NOTE:** Please read this information before installing. **DRILLING IS REQUIRED** for installation of these tail light guards. To obtain correct installation, we recommend you to follow these step by step installation instructions carefully. The manufacture is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.

**STEP ONE:** Locate hardware and check contents with the hardware listed below.

DESCRIPTION	QTY
Taillight Guard	2
ST4.2*25 Sheet Metal Screws	6
M5 Flat Washers	6

**STEP TWO:** Position the tail light guard over the tail light lens as shown in fig #1 & 2. **Open and close the tailgate slowly, to be certain that the tail light guard does not interfere with the tailgate. Some adjustment on the brackets may be needed.**

**STEP THREE:** With the Taillight Guard in position, mark the vehicle through the holes in the mounting bracket. Remove Taillight Guard from the vehicle and place it aside.

**STEP FOUR:** Drill a 1/8" hole on the marked locations. **"CAUTION" before drilling be sure to check the back side of the drilling area for possible hazards or obstructions.**

**STEP FIVE:** Position Taillight Guard back on the vehicle and secure it by using the included # 8 x 3/4' Sheet Metal Screws and # 8 Flat Washers. **"Note" it is very important not to over tighten the screws or pullout could occur.** Repeat steps 2-4 for opposite side.

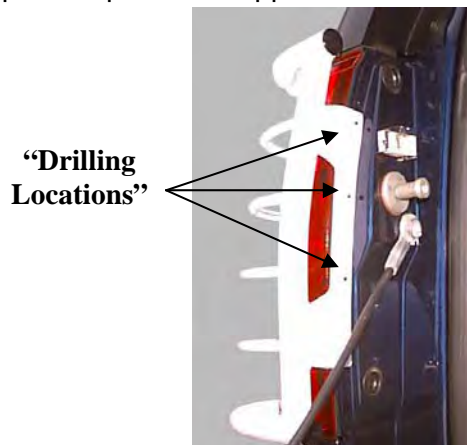


Figure 1

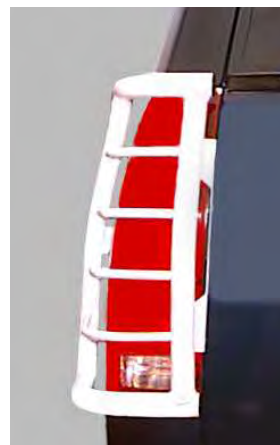


Figure 2



Westin Automotive Products, Inc.  
5200 N. Irwindale Ave. Suite 220  
Irwindale, Ca. 91706

Thank You for choosing Westin products  
For additional installation assistance please  
call

Customer Service (800) 345-8476 or (626) 960-6762