



Installation Instructions

Tail Light Guard P/N#39-3080/39-3085

98-01 Ford Explorer

Part List:

Item number	Description	Quantity
1	Light Guard	2
2	ST4. 2 *19 Self Tapping Screws	8

Note: Please protect the product from being scratched during the installation process.


Step One: Locate hardware and check contents with hardware listed above. Read instructions completely before beginning.

Step Two: Open rear Lift Gate. Position Taillight Guard in the center of the Taillight lens with formed Mounting Bracket tight against the inside Lift Gate Jam. While holding the Taillight Guard into position, carefully and slowly close rear Lift Gate to make sure there is adequate clearance for Lift Gate to operate without touching Taillight Guard. Adjust formed Mounting Brackets accordingly to achieve adequate clearance. Mark the location of the Mounting Bracket holes onto Lift Gate Jam (Center punch the marked locations).

Step Three: Drill the marked locations using a #7 drill bit. Attach Taillight Guard using #8 X 3/4 Self Tapping Screws provided. NOTE: Do not over tighten because this could result in stripping the threads.

Step Four: Repeat Steps 1-3 on opposite side.

Note: This Taillight Guard was designed to fit snugly against the body of your vehicle. As the screws are tightened the Taillight Guard will draw tight against the body for a snug fit. If you feel the Guard is too tight, you can slightly adjust the Mounting Brackets to lessen the pressure on the body.

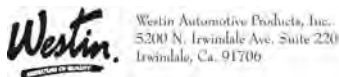

Thank You for choosing Westin products
For additional installation assistance please call
Customer service (800) 793-7846 or (507) 375-3559