



SIGNATURE OF QUALITY

Taillight Guard PART#39-3320/3325 03-05 Ford Expedition

NOTE: Please read this information before installing. **NO DRILLING REQUIRED** for the installation of these taillight guards. To obtain correct installation, we recommend you follow this step by step installation carefully. Please take care when installing this product to protect the finish and your investment.

QTY	DESCRIPTION
2	Taillight Guard (Passenger & Driver)

Step 1: Remove factory screws holding the taillight housing to the vehicle, save screws for later use (Figure 1). Carefully remove taillight housing from vehicle by pulling it and unfastening clips. **NOTE:** You do not need to unplug the taillight housing.

Step 2: Orient Taillight Guard onto taillight housing and engage side Support Bracket to taillight housing (Figure 2).

Step 3: Position Taillight Guard assembly onto vehicle and fasten factory clips.

Step 4: Secure the guard to the vehicle by using factory screws (Figure 3). Open and close the tailgate slowly, to be certain that the Guard does not interfere with tailgate. **NOTE:** During shipping Brackets may loose their shape. In order to get a proper fit, Bracket might need to be re-shaped slightly.

Step 5: Repeat steps 1 – 4 for opposite side.



Figure 1



Figure 2

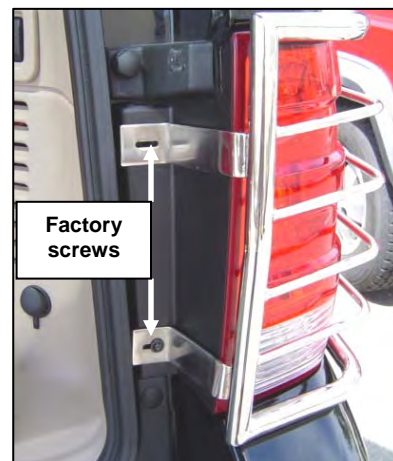


Figure 3

Cleaning Instructions: For stainless steel, an aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap, window and glass cleaner may be used to clean stainless steel. For gloss black and chrome finishes. Mild soap, window and glass cleaner may be used. Do not use any type of polish or wax that contains abrasive that could damage the finish.



Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

Thank You for choosing Westin products
For additional installation assistance please
call

Customer service (800) 345-8476 or (626) 960-6762