



# Installation Instructions

## Taillight Guard Part#39-3360/3365

### 04-09 Colorado / Canyon

**Step One:** Locate hardware and check contents with hardware listed below.

QTY	DESCRIPTION
2	Taillight Guard (Left & Right)
4	ST4.2*30 Phillips Sheet Metal Screw
4	M4 Flat Washers
4	Adhesive Foam Pads

**Step Two:** Remove factory screws supporting the taillight housing to the vehicle (Figure 1 & 2). Carefully unfasten clips and pull out the taillight.

**Step Three:** Slide Taillight Guard into taillight housing making sure that the support bracket hooks to the taillight housing (Figure 3).

**Step Four:** Place an Adhesive Foam Tape on the outer face of the support bracket before returning the assembly to the vehicle.

**Step Five:** Take the Taillight Guard Assembly and align the bracket holes with the mounting holes on the vehicle (Figure 1 & 2). Replace the factory screws with the included #8 x 1" Phillips Sheet Metal Screws and #8 Flat Washers. **NOTE: Open and close the tailgate slowly, to be certain that the Taillight Guard does not interfere with the tailgate.** Repeat steps 2-5 for opposite side.



Figure 1

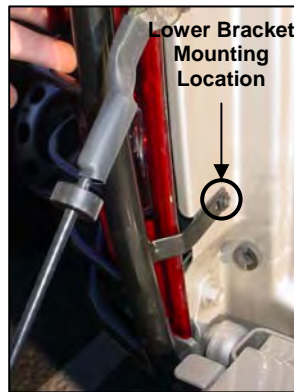


Figure 2



Figure 3



Figure 4



Westin Automotive Products, Inc.  
5200 N. Irwindale Ave. Suite 220  
Irwindale, Ca. 91706

Thank You for choosing Westin products  
For additional installation assistance please call  
Customer Service (800) 345-8476 or (626) 960-6762