




INSTALLATION INSTRUCTIONS
TAILLIGHT GUARD
05-09 TOYOTA TACOMA
PART NUMBER 39-3390/39-3395

PARTS LIST:

1	Passenger Side Taillight Guard	1	Driver Side Taillight Guard
---	--------------------------------	---	-----------------------------

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- Open tailgate and remove passenger side factory screws holding taillight housing. Save screws for later use.
- Grasp the taillight housing with one hand and pull gently to unsnap fasteners. **WARNING:** Be sure to pull straight out to avoid possible damage. If is too tight, then use a large standard flat screw driver and something like a cardboard backing of a note pad or towel to protect the paint from damage. Gently pry off the outside of the taillight assembly out of the vehicle. This is the same procedure required to change a burn out taillight in the assembly.
- Carefully attach Taillight Guard onto taillight housing by sliding down Taillight Guard from the top of the taillight housing. The two support brackets should hook to the edge of the taillight housing. If they don't fit correctly, they can be adjusted to fit correctly using a pair of pliers.
- Return the assembly back to the vehicle making sure that the Taillight Guard is aligned and centered correctly on the taillight housing. Carefully snap fasteners back into place.
- Close rear door and make sure that the Taillight Guard does not interfere.
- Once the Taillight Guard is aligned, use the factory screws removed in step 2 to secure the Taillight Guard assembly.
- Repeat steps 2-7 for opposite side.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

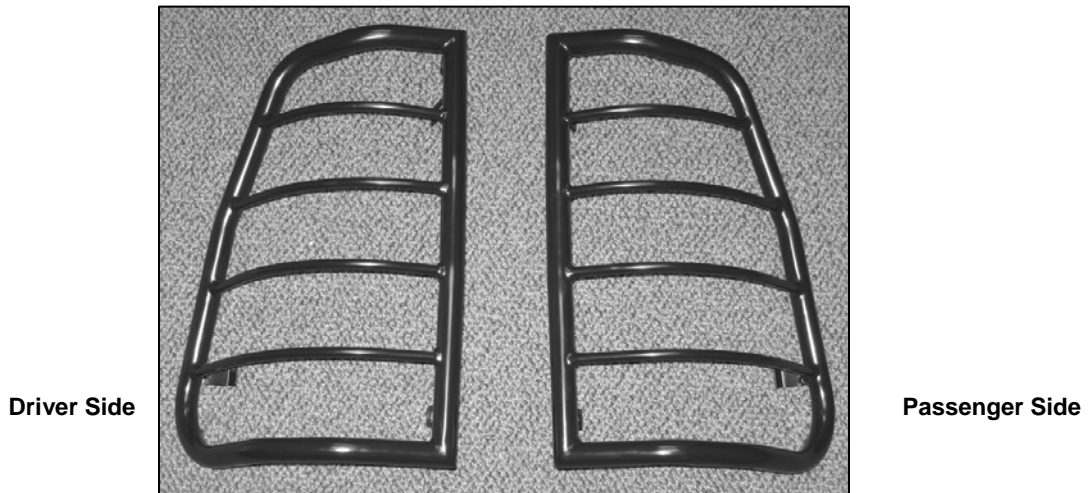

Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Suite 220
Irwindale, Ca. 91706

Thank You for choosing Westin products
For additional installation assistance please call
Customer service (800) 345-8476 or (626) 960-6762