



INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2005-2008 JEEP GRAND CHEROKEE
 PART NUMBER: 40-1995, 45-0990

AUTOMOTIVE PRODUCTS, INC.

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	16MM WRENCH
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	16MM SOCKET
4,5	Q	TOP BRACKETS (4) DRIVERS SIDE, (5) PASSENGER SIDE	18MM WRENCH
6	2	M10 DOUBLE NUT PLATES	18MM SOCKET
7	6	M12 X 35MM HEX HEAD BOLTS	RATCHET
8	6	M12 HEX NUTS	TORQUE WRENCH
9	6	M12 LOCK WASHERS	
10	12	M12 FLAT WASHERS	
11	2	M10 X 30MM BUTTON HEAD BOLTS	
12	4	M10 X 35MM HEX HEAD BOLTS	
13	6	M10 FLAT WASHERS	
14	6	M10 LOCK WASHERS	
15	6	M10 HEX NUTS	
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	16MM WRENCH
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	16MM SOCKET
4,5	Q	TOP BRACKETS (4) DRIVERS SIDE, (5) PASSENGER SIDE	18MM WRENCH
6	2	M10 DOUBLE NUT PLATES	18MM SOCKET
7	6	M12 X 35MM HEX HEAD BOLTS	RATCHET
8	6	M12 HEX NUTS	TORQUE WRENCH
9	6	M12 LOCK WASHERS	
10	12	M12 FLAT WASHERS	
11	2	M10 X 30MM BUTTON HEAD BOLTS	
12	4	M10 X 35MM HEX HEAD BOLTS	
13	6	M10 FLAT WASHERS	
14	6	M10 LOCK WASHERS	
15	6	M10 HEX NUTS	
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	GRILLE GUARD	16MM WRENCH
2,3	2	MOUNTING BRACKETS (2) DRIVERS SIDE, (3) PASSENGER SIDE	16MM SOCKET
4,5	Q	TOP BRACKETS (4) DRIVERS SIDE, (5) PASSENGER SIDE	18MM WRENCH
6	2	M10 DOUBLE NUT PLATES	18MM SOCKET
7	6	M12 X 35MM HEX HEAD BOLTS	RATCHET
8	6	M12 HEX NUTS	TORQUE WRENCH
9	6	M12 LOCK WASHERS	
10	12	M12 FLAT WASHERS	
11	2	M10 X 30MM BUTTON HEAD BOLTS	
12	4	M10 X 35MM HEX HEAD BOLTS	
13	6	M10 FLAT WASHERS	
14	6	M10 LOCK WASHERS	
15	6	M10 HEX NUTS	



Westin Automotive Products, Inc.
 5200 N. Irwindale Ave. Ste 220
 Irwindale, Ca 91706

Thank You for choosing Westin products
 For additional installation assistance please call
 Customer Service (800)793-7846



INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2005-2008 JEEP GRAND CHEROKEE
PART NUMBER:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Starting on the driver side of the vehicle, through the grille locate the three factory holes in the bottom of the radiator support and insert one of the M12 double nut plates through the inside square hole and aligned to the small round hole.
3. Partially attach the drivers side mounting bracket to the previously inserted double nut plate using, (2) M10 X35MM hex head bolts, (2) M10 flat washers, (2) M10 lock washers. Do not fully tighten at this time
4. Repeat steps 2-3 for the passenger side.
5. Open the hood and locate the six plastic fasteners across the top of the factory grille shell and remove them. Pull the plastic shell away from the vehicle and set it aside.
6. Slightly pull down on the rubber shroud located on the passenger lower part of the radiator to expose the two factory bolts located behind the radiator metal lines. Remove the bottom factory bolt
7. With the 90° degrees bend towards the rear, attach top bracket to previously removed bolt location using the factory bolt. **NOTE:** Place top bracket behind radiator metal lines. Do not fully tighten at this time.
8. The driver side rubber shroud requires some cutting. With the 90° degrees bend towards the rear, place the top bracket over rubber shroud and align hole in the top bracket with previously removed bolt location. Mark the width and thickness of the top bracket on the rubber shroud right by the bend on the top bracket.
9. Use a utility knife to cut out the section you marked, once this is done place top bracket through gap and attach with factory bolt. Do not fully tighten at this time.
10. Re install the grille shell at this time.
11. Position the grille guard on the inside of the mounting brackets and attach with (6) M12 X 35MM hex head bolts, (6) M12 flat washers, (6) M12 lock washers, and (6) M12 hex nuts. Do not fully tighten at this time.
12. Attach grille guard to top brackets with (2) m10 x 30mm button head bolts, (2) M10 lock washers, (2) M10 flat washers, and (2) M10 hex nuts.
13. Adjust the grille guard properly. Tighten all fasteners at this time torque M10 hardware to 10-15 ft lbs, torque all M12 hardware to 20-25 ft lbs.

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Starting on the driver side of the vehicle, through the grille locate the three factory holes in the bottom of the radiator support and insert one of the M12 double nut plates through the inside square hole and aligned to the small round hole.
3. Partially attach the drivers side mounting bracket to the previously inserted double nut plate using, (2) M10 X35MM hex head bolts, (2) M10 flat washers, (2) M10 lock washers. Do not fully tighten at this time
4. Repeat steps 2-3 for the passenger side.
5. Open the hood and locate the six plastic fasteners across the top of the factory grille shell and remove them. Pull the plastic shell away from the vehicle and set it aside.
6. Slightly pull down on the rubber shroud located on the passenger lower part of the radiator to expose the two factory bolts located behind the radiator metal lines. Remove the bottom factory bolt
7. With the 90° degrees bend towards the rear, attach top bracket to previously removed bolt location using the factory bolt. **NOTE:** Place top bracket behind radiator metal lines. Do not fully tighten at this time.
8. The driver side rubber shroud requires some cutting. With the 90° degrees bend towards the rear, place the top bracket over rubber shroud and align hole in the top bracket with previously removed bolt location. Mark the width and thickness of the top bracket on the rubber shroud right by the bend on the top bracket.
9. Use a utility knife to cut out the section you marked, once this is done place top bracket through gap and attach with factory bolt. Do not fully tighten at this time.
10. Re install the grille shell at this time.
11. Position the grille guard on the inside of the mounting brackets and attach with (6) M12 X 35MM hex head bolts, (6) M12 flat washers, (6) M12 lock washers, and (6) M12 hex nuts. Do not fully tighten at this time.
12. Attach grille guard to top brackets with (2) m10 x 30mm button head bolts, (2) M10 lock washers, (2) M10 flat washers, and (2) M10 hex nuts.
13. Adjust the grille guard properly. Tighten all fasteners at this time torque M10 hardware to 10-15 ft lbs, torque all M12 hardware to 20-25 ft lbs.

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
2. Starting on the driver side of the vehicle, through the grille locate the three factory holes in the bottom of the radiator support and insert one of the M12 double nut plates through the inside square hole and aligned to the small round hole.
3. Partially attach the drivers side mounting bracket to the previously inserted double nut plate using, (2) M10 X35MM hex head bolts, (2) M10 flat washers, (2) M10 lock washers. Do not fully tighten at this time
4. Repeat steps 2-3 for the passenger side.
5. Open the hood and locate the six plastic fasteners across the top of the factory grille shell and remove them. Pull the plastic shell away from the vehicle and set it aside.
6. Slightly pull down on the rubber shroud located on the passenger lower part of the radiator to expose the two factory bolts located behind the radiator metal lines. Remove the bottom factory bolt
7. With the 90° degrees bend towards the rear, attach top bracket to previously removed bolt location using the factory bolt. **NOTE:** Place top bracket behind radiator metal lines. Do not fully tighten at this time.
8. The driver side rubber shroud requires some cutting. With the 90° degrees bend towards the rear, place the top bracket over rubber shroud and align hole in the top bracket with previously removed bolt location. Mark the width and thickness of the top bracket on the rubber shroud right by the bend on the top bracket.
9. Use a utility knife to cut out the section you marked, once this is done place top bracket through gap and attach with factory bolt. Do not fully tighten at this time.
10. Re install the grille shell at this time.
11. Position the grille guard on the inside of the mounting brackets and attach with (6) M12 X 35MM hex head bolts, (6) M12 flat washers, (6) M12 lock washers, and (6) M12 hex nuts. Do not fully tighten at this time.
12. Attach grille guard to top brackets with (2) m10 x 30mm button head bolts, (2) M10 lock washers, (2) M10 flat washers, and (2) M10 hex nuts.
13. Adjust the grille guard properly. Tighten all fasteners at this time torque M10 hardware to 10-15 ft lbs, torque all M12 hardware to 20-25 ft lbs.



Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Ste 220
Irwindale, Ca 91706

Thank You for choosing Westin products
For additional installation assistance please call
Customer Service (800)793-7846





Westin

SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS—INSTRUCCIONES—CONSIGNES

APPLICATION: 2005-2008 JEEP GRAND CHEROKEE
PART NUMBER:

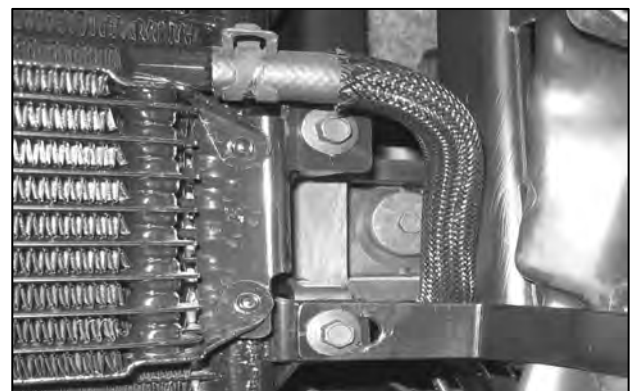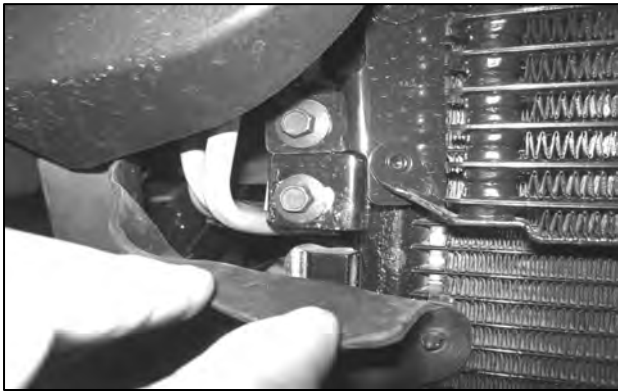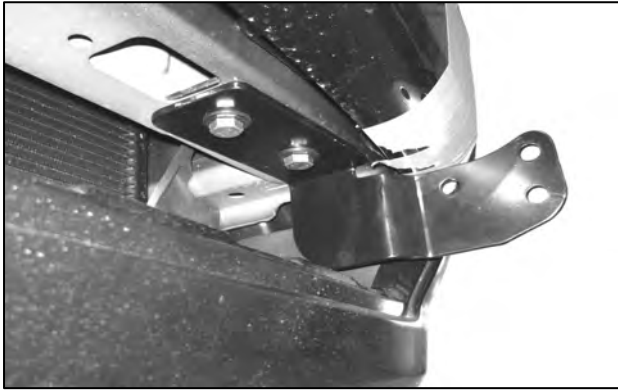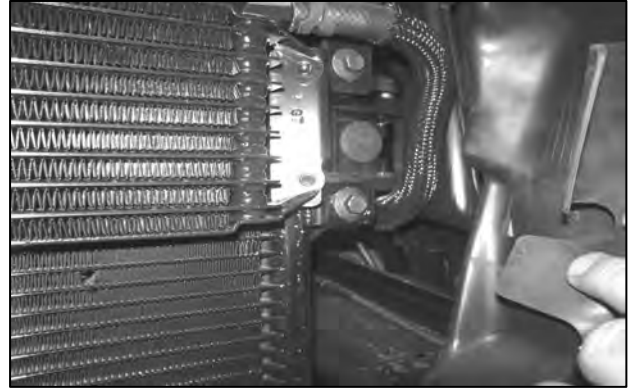

Westin

SIGNATURE OF QUALITY

Westin Automotive Products, Inc.
5200 N. Irwindale Ave. Ste 220
Irwindale, Ca 91706

Thank You for choosing Westin products
For additional installation assistance please call
Customer Service (800)793-7846