



Instruction Sheet


The Wade Skytop is designed to give you an outdoor feeling while still protecting you from the elements.

There are a few steps you need to perform to insure a proper fit. First you want to remove all tops (hard top or bikini top, and side and rear windows). If you have a four door vehicle you will want to place the rear Skytop on first, so that the front one overlaps it.


*****IMPORTANT – when installing straps it is important to have the “fuzzy” side toward you**

Front Kit includes:


- 3 – 8” straps (front windshield)
- 4 – 14” straps (front Skytop sides)
- 2 – 17” straps (middle, rear sides, and rear)

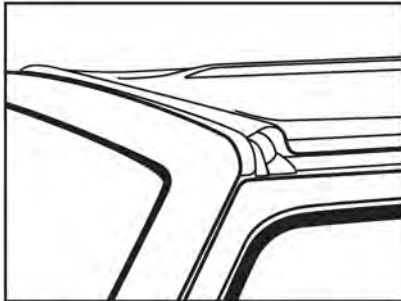


1– Place Front Skytop on.
Be sure part goes in the channeling groove
Then feed it through the slot of the rear Skytop

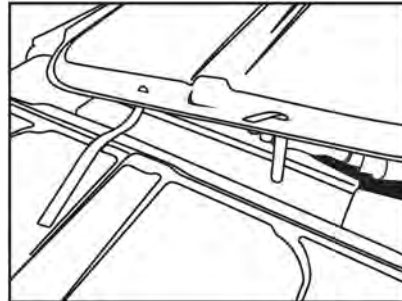


2 – Feed strap through hole in roll bar.
Through the rear slot in front Skytop.

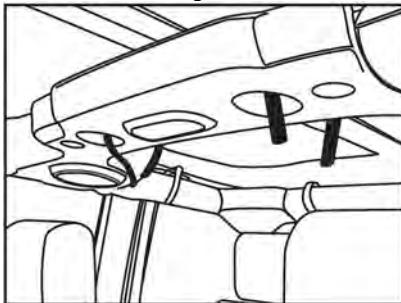

3 – Let straps hang (you will secure them last).

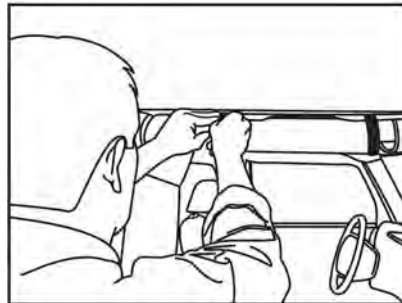

5 – Starting with the 3 – 8” straps, secure the
Skytop to the hooks over the windshield

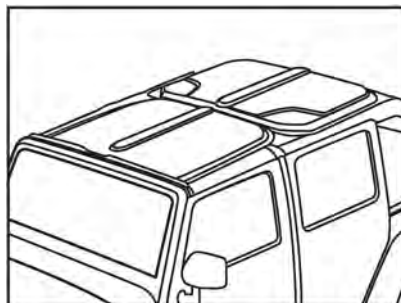

6 – Secure all straps, by tightening them down.
(show with optional Rear Skytop)

CLEANING INSTRUCTIONS: Wash with warm water and a mild soap solution using a soft, clean cloth or sponge. Use of cleaners not approved for acrylic, or the use of improper solvents could result in permanent damage which will not be covered by the warranty.

Warranty: Wade Automotive Products warrants this product to be free of original defects in material or workmanship, to the original owner for the first 90 days

www.wadeauto.com