



Automotive Products

863 South 500 West, Salt Lake City, UT. 84101 801 355-0972 Fax 801 363-1573

Acrylic Skytop

Part # 51064 - Rear

Instruction Sheet


The Wade Skytop is designed to give you an outdoor feeling while still protecting you from the elements.

There are a few steps you need to perform to insure a proper fit. First you want to remove all tops (hard top or bikini top, and side and rear windows). If you have a four door vehicle you will want to place the rear Skytop on first, so that the front one overlaps it.


*****IMPORTANT – when installing straps it is important to have the “fuzzy” side toward you**

Rear Kit includes:


6 – 17” straps (middle, rear sides, and rear)

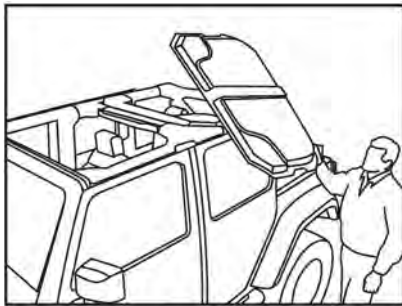


1 – Place rear Skytop on vehicle.

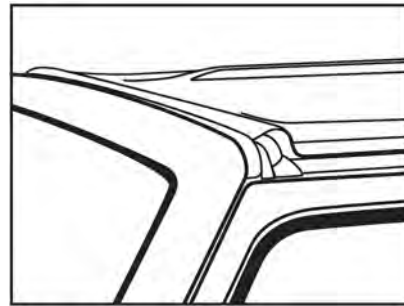


2 – Place Front Skytop on.
Be sure part goes in the channeling groove

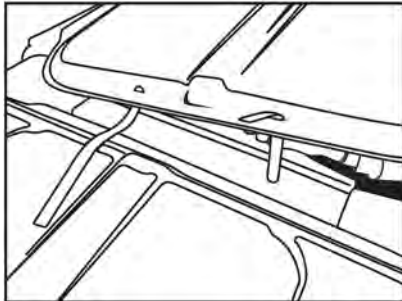


3 – Feed strap through hole in roll bar.
Through the rear slot in the front Skytop.
Then feed it through the slot of the rear Skytop.

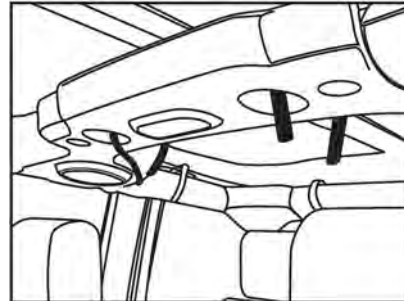

4 – Let straps hang (you will secure them last).

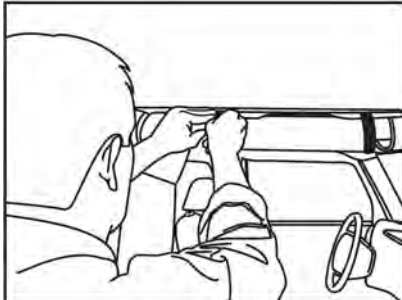

5 – Starting with the 3 – 8” straps, secure the Skytop to the hooks over the windshield.

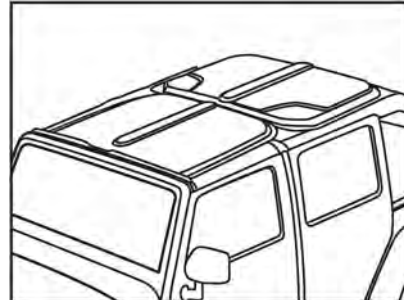

6 – Secure all straps, by tightening them down.

CLEANING INSTRUCTIONS: Wash with warm water and a mild soap solution using a soft, clean cloth or sponge. Use of cleaners not approved for acrylic, or the use of improper solvents could result in permanent damage which will not be covered by the warranty.

Warranty: Wade Automotive Products warrants this product to be free of original defects in material or workmanship, to the original owner for the first 90 days

www.wadeauto.com