



Window Visors

Installation Instructions

**PLEASE READ THESE
INSTRUCTIONS BEFORE
INSTALLATION**

Tape adheres best at temperatures
over 65°F (18° C)

**1) Trial Fit without removing the
masking from the double-sided tape.
Take note of the contact area.**

**2) With alcohol pad clean contact
area. After cleaning, wipe dry with
a clean, dry cloth.**

**3) Partially remove masking (fold
upwards)**


4) Carefully put visor in place

**5) By pulling upward remove the
rest of the masking.**

**6) Rub over taped edge firmly with a
soft cloth to fully adhere tape.**

***For a four piece set, repeat the
above steps.**

**REQUIREDS 48 hours to cure. Do
not wash vehicle for 48 hours after
installation.**

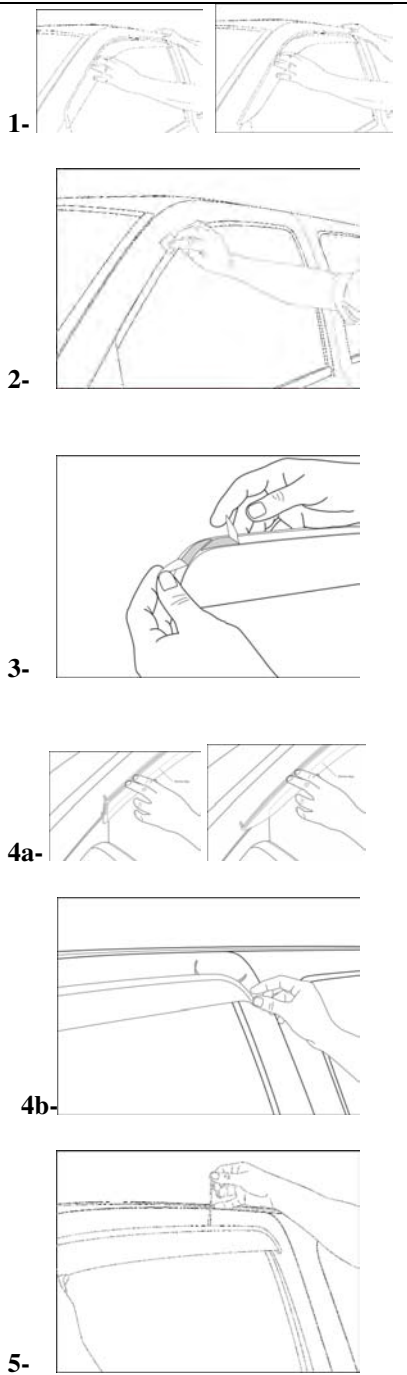

Cleaning Instructions: Wash with warm water and a mild soap solution using a soft, clean cloth or sponge. Use of cleaners not approved for acrylic, or use of improper solvents could result in permanent damage.