

### FORD F-150 REGULAR CAB/SUPER CAB & CREW CAB TRUCKS WITH FACTORY FLARES AND LINCOLN MARK LT—LOGO READY REAR MUD GUARDS

#### REAR MUD GUARDS

*Please read instructions thoroughly before installation.*

#### Tools Required

- 1/8" drill bit / Drill
- Short #2 Phillips screwdriver
- Center punch

#### Package Contents

- Driver & passenger side rear mud guard
- #10 screw (qty. 8)
- Washers (qty. 8)
- U-Clip (qty. 2)
- Instruction sheet

**NOTE:** It may be necessary to remove the rear wheels for mud guard installation.

1. Clean the mud guard location area on the fender before installation.
2. Remove factory fastener from locations B and place a U-clip over sheet metal and align fastener holes (Figure 3. 3. Attach mud guard with a #10 screw and washer at location B, check fit and make sure the mud guard is parallel to the ground before tightening.
4. Using the mud guard as a template, center punch and drill an 1/8" hole at location A, C, and D (Figure 1).
5. Install #10 screws and washers at location A, C, and D.

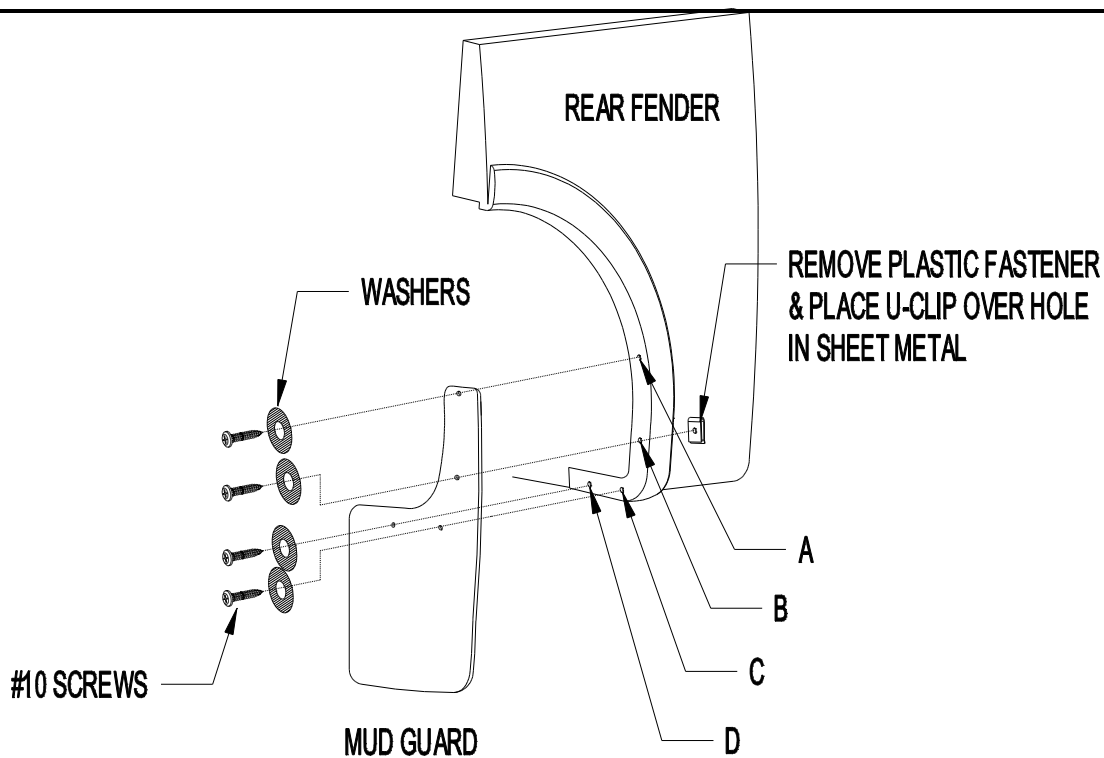


Figure 1

**NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.**