



PART NO. **5446**

FRONT LOGO READY MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required



- 1/8" drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver or drill attachment
- Small clamp

Package Contents

- Driver & passenger side rear mud guard
- #8 screw (4)
- #10 screw (2)
- Washers (6)
- U-clip (2)
- Instruction sheet

NOTE: It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean the mud guard location area on the fender before installation.
2. Remove existing fasteners from location A, B and D (Leave fastener in location C). See figure 1
3. Install U-clip over existing hole at location D. See Figure 2
4. Install mud guard using #8 screws and washers at locations A and B and #10 screw and washer at location D.
5. Check fit and parallel and adjust accordingly before tightening.

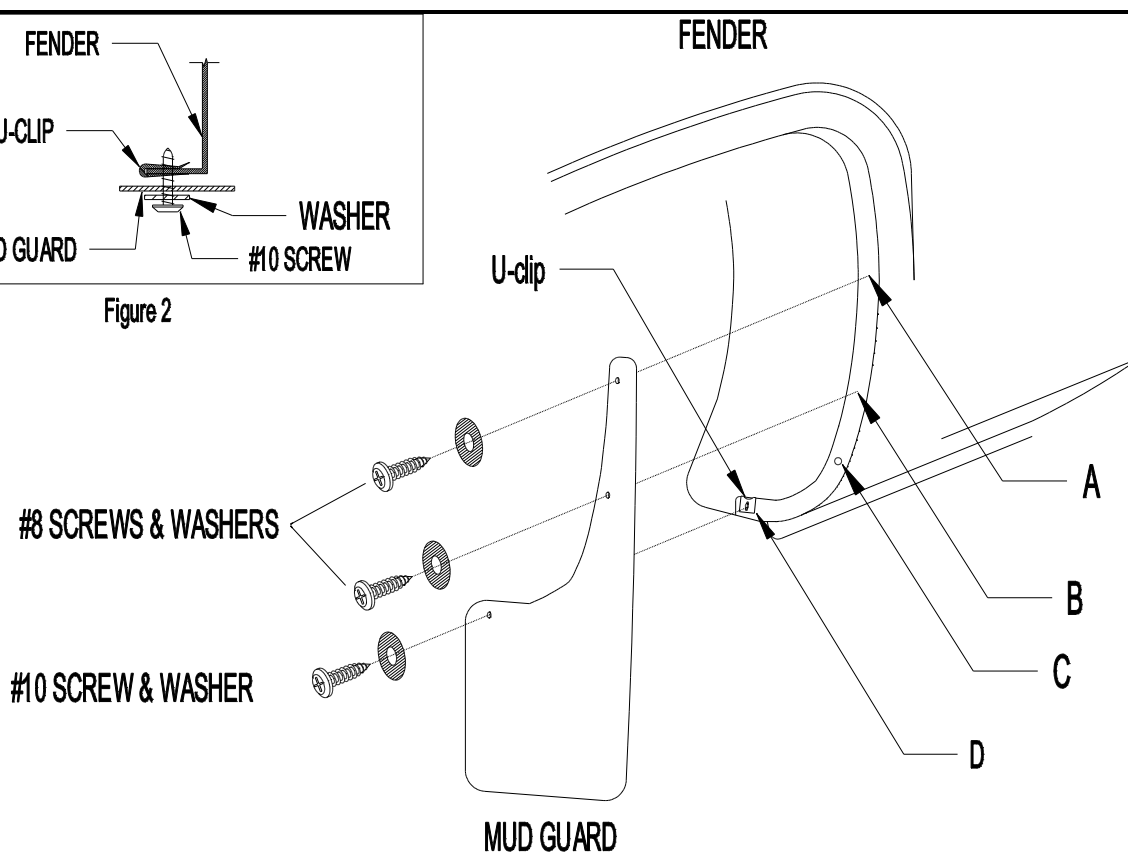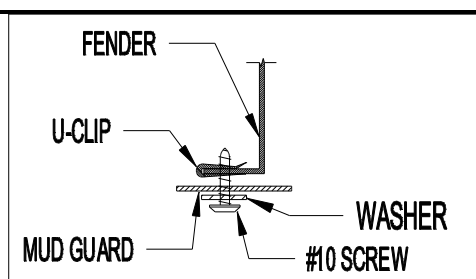

NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.