



INSTALLATION INSTRUCTIONS

MAKE: Dodge / RAM
MODEL: 3500, 4500, 5500
YEAR: 2013 - 2018
ENGINE: L6-6.7L (td)

Race Pipe
49-22012RP
49-52012RP




RACE ONLY DISCLAIMER

This is a Race Only product that is to be used solely for competition, it cannot be used on vehicles that are operated on public streets, roads or highways. Its use is limited to closed-course and open-course racing that is formally sanctioned by a recognized racing organization. Any other use, including recreational off-road use, could be in violation of local, state and federal laws. A competition acknowledgement / liability release form must be filled out and submitted.

Pipe Assembly

05-144607 (409 Stainless Steel)
05-142607 (Aluminized Steel)

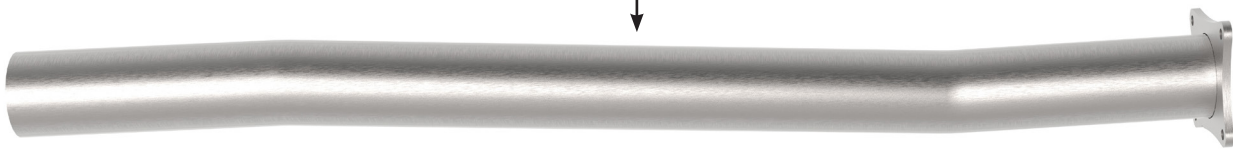

Caution: aFe recommends professional installation on our products. Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Step 1: (Read instructions prior to installation.) Starting at the rear of the truck

unplug any sensors that are attached to the OE exhaust up to the SCR.

Step 2: Remove the OE exhaust up to the flanged joint where the OE SCR connects to the DPF.

Use jack stands to help support the weight.

Step 3: Install the aFe POWER pipe assembly using the OE Gaskets and OE nuts.

Step 4: Re-install the OE exhaust. Adjust exhaust and tighten all hardware and clamps.

Step 5: Congratulations your exhaust is now complete it is recommended to re-check and

tighten all exhaust 50-100 miles after installation.