




P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Intake Kit Installation Instructions: 2006-2008 Honda Ridgeline V6-3.5L


Kit Part #	51/54-10911	Tools Required 5/16" nut driver Slotted screwdriver 10mm socket or wrench Ratchet and extension	Part List: 1 Air filter (replacement # 24-90035) or Pro Dry S™ 21-90035 1 Housing 1 Housing Cover 3 Button Head Screws 2 Screws, M6x1x25 5 M6 Washers, flat 2 M6 Washers, lock
Make:	Honda		
Model:	Year: '06-'08 Engine: V6-3.5L		

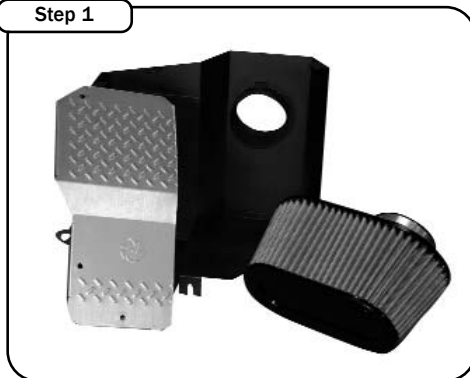

Step 1
Complete kit. Make sure all components listed are included prior to beginning installation.



Step 2
Complete stock intake.

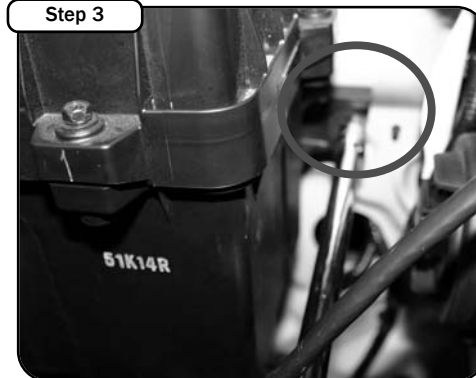

Step 3
Remove the lower 10 mm bolt securing the air box.



Step 4
Remove the 10mm bolt securing the back of the air box.



Step 5
Remove the airbox assembly out of the engine compartment.



Step 6
Loosen but do not remove the bolt securing the air intake snorkel.



Step 7
Position the new housing inside the engine compartment. Make sure the lower mounting tab slide in the snorkel mount.



Step 8
Secure housing with supplied bolts and washers. Connect intake duct to the housing.



Step 9
Install intake filter into housing. Do not use any grease or oil to install air filter



Step 10
Install the aluminum cover and secure with the supplied button head screws. Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re-check periodically.

Place enclosed CARB EO sticker on a clean/smooth surface on or near the intake system. EO identification label is required in passing the Smog Check Inspection.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil. Filter Replacement: Magnum FLOW PN: 24-90035 (black w/blue media). **Pro Dry S™** P/N: 21-90035 (black w/ white media) **Pro Dry S™** cleaning: see cleaning instruction sheet 06-00074