




advanced FLOW engineering™
 P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFepower.com

Intake kit Installation Instructions: 2005-2006 Toyota Tundra / 2005-2007 Sequoia V8-4.7L Stage 2

Kit P/N: 51/54-10942	Tools Required: 10mm socket or wrench 12mm socket or wrench 5/16" nut driver Flat head screwdriver Phillips screwdriver Ratchet w/ extension 5/32" hex key 7/16" socket or wrench	Parts list: 1 Air filter (Pro-5R™ 24-90015 Pro Dry S™ 21-90015) 1 Housing 1 Tube, intake 1 Coupler, straight 3-1/2" x 2" 1 Coupler, elbow 1 Adaptor, filter 3 Screw, button head M6 1 Washer, flat M6 1 Washer, wavy M6 1 Gasket, MAF	1 3/4" trim seal @ 33"L 1 Nipple, brass 3/16" x 1/8" 1 5/32"L hose @ 13"L 1 5/8"L hose @ 13"L 1 Screw, hex M6 x 1 x 12 2 Clamp, #060 2 Clamp, #072 2 Spacer, nylon 1/2"x1/4"x1/8" 1 Clamp, mini #008 1 Vent hose, Tee 3/16" 2 Screws, M4 x .7 x 16
-----------------------------	--	---	--




Complete Kit w/ Parts

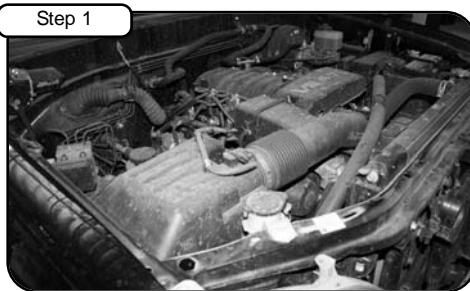

Complete Stock Intake.




With 10mm wrench or socket, loosen bolts on engine cover. Loosen bracket holding AC line to tube and remove. Disconnect MAF sensor harness.

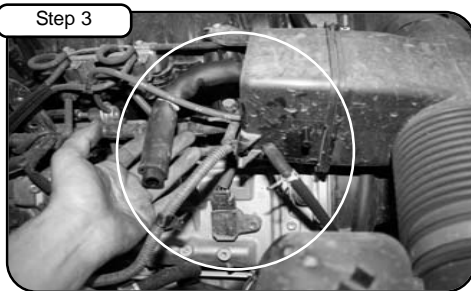

With 10mm nut driver or flat head screwdriver loosen clamps. Disconnect both the vacuum line and crankcase breather on stock tube.




Remove OE intake tube.

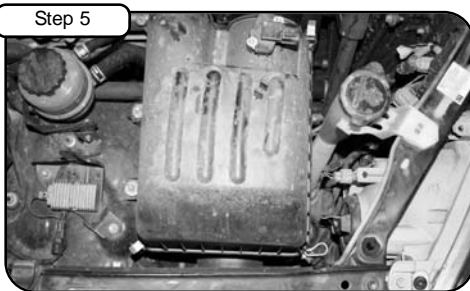

With 12mm socket or wrench loosen the 3 bolts holding in air box. Remove complete air box out of vehicle.



Install filter adaptor to inside of housing using 5 button head screws and wavy washers. Tighten using 5/32 hex key. Install 3/4" trim seal to housing.

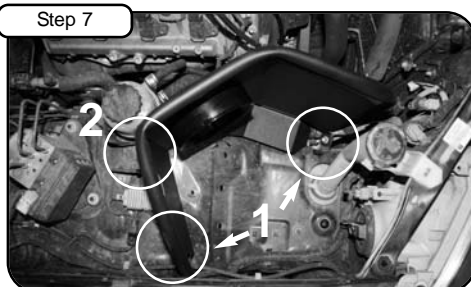


Install housing to vehicle. 1) Use factory screws. 2) Use M6 screw with flat washer provided.




Remove MAF sensor from stock air box. Install into new tube using gasket, 1/8" nylon spacers, and M4 screws provided. Install brass nipple to tube and tighten. Install couplers with clamps on tube.



Install new tube into vehicle. Position tube to throttle body and housing. *Do not tighten clamps.*

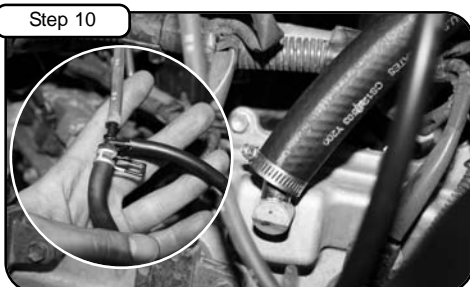

Remove factory crankcase breather. With mini clamp install 5/8" hose to vehicle and tighten using flat head screwdriver. Install "T" fitting to both vacuum lines and with new 5/32" hose provided to new tube. (see small photo)

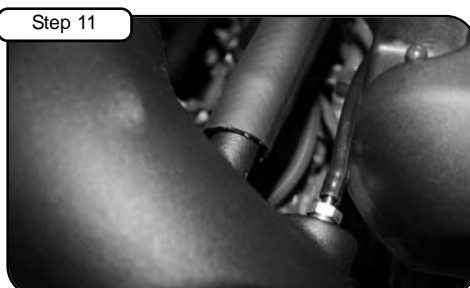

Install new vacuum line and crankcase breather to tube.



Tighten clamps at throttle body with 5/16" nut driver.



Tighten clamps at housing side using 5/16" nut driver. Re-connect MAF sensor harness.



Install air filter and tighten using 5/16" nut driver. Re-install engine cover.



Your installation is now complete. Please check all bolts and clamps periodically. Re-tighten if necessary. Thank you for choosing aFe!

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil).
 Filter Replacement: **Pro-5R™** PN: 24-90015 (black w/blue media). **Pro Dry S™** P/N: 21-90015 (black w/white media) **Pro Dry S™** cleaning: see cleaning instruction sheet 06-00074.